


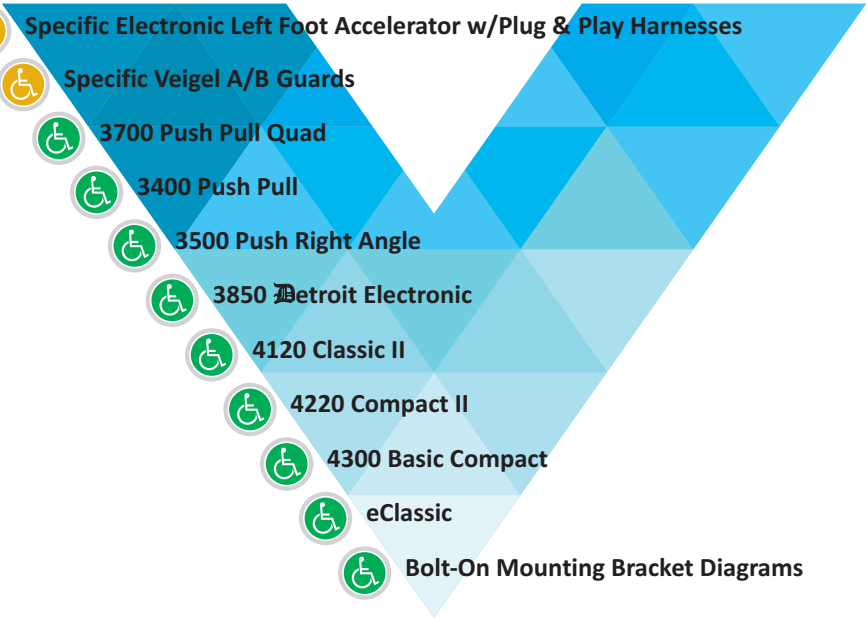












2021 Bracket Guide

Technology Designed to Help

- 
-  Specific Electronic Left Foot Accelerator w/Plug & Play Harnesses
 -  Specific Veigel A/B Guards
 -  3700 Push Pull Quad
 -  3400 Push Pull
 -  3500 Push Right Angle
 -  3850 Detroit Electronic
 -  4120 Classic II
 -  4220 Compact II
 -  4300 Basic Compact
 -  eClassic
 -  Bolt-On Mounting Bracket Diagrams

A Veigel North America Company

Dbas: Mobility Products & Design

51277 Celeste Drive

Shelby Township, MI 48315 USA

Phone: (800) 488-7688

Fax: (888) 485-2499

www.veigel-na.com

Table of Contents

	Page
Specific Electronic Left Foot Accelerators	1-2
Vehicle Specific Veigel Pedal Guards	3-4
3700 Push Pull Quad Floor Mount	5
3300 Push Rock Mounting Brackets	6-24
3400 Push Pull Mounting Brackets	6-24
3500 Push Right Angle Mounting Brackets	6-24
3850 Detroit Electronic Mounting Brackets	6-24
4120 Classic II Specific Mounting Brackets	25-28
4220 Compact II Specific Mounting Brackets	25-28
4300 Basic Specific Mounting Brackets	25-28
eClassic Specific Mounting Brackets	29
Bolt-On Mounting Bracket Diagrams	30-36

Our 2 & 3 ohm Universal Air Bag Shunts now come with contact pins for direct insertion into the air bag connector.

Specific Electronic Left Foot Accelerators

A

<u>Make</u>	<u>Model</u>	<u>Year(s)</u>	<u>ELFA P/N</u>
Acura	RDX	2019+	29GG84

B

Buick	Enclave	2008-2017	29DE55
Buick	Enclave	2018+	29DQ87
Buick	Envision	2016-2020	29DQ97
Buick	LaCrosse	2010-2016	29DB76
Buick	LaCrosse	2017-2019	29DD67
Buick	Regal	2010-2017	29DB76

C

Cadillac	Escalade	2015-2020	29DF54
Cadillac	XT5	2017+	29DQ80
Cadillac	XT6	2020+	29DQ80
Cadillac	XT5	2013-2019	29DB76
Chevrolet	Blazer	2019+	29DB76
Chevrolet	Camaro	2016+	29DD69
Chevrolet	Cruze	2011-2015	29DB51
Chevrolet	Equinox	2010-2017	29DE52
Chevrolet	Equinox	2018+	29DQ78
Chevrolet	Impala	2014-2019	29DB76
Chevrolet	Malibu	2008-2012	29DE53
Chevrolet	Malibu	2013-2015	29DB76
Chevrolet	Malibu	2016+	29DD67
Chevrolet	Silverado 1500	2014-2018	29DF54
Chevrolet	Silverado 1500	2019+	29DC81
Chevrolet	Silverado LD	2019	29DF54
Chevrolet	Silverado 2500/3500	2015-2019	29DF54
Chevrolet	Suburban	2015-2020	29DF54
Chevrolet	Tahoe	2015-2020	29DF54
Chevrolet	Traverse	2009-2016	29DE55
Chrysler	200	2015-2017	29DB56
Chrysler	300/300C	2011+	29BC57
Chrysler	Pacifica	2017+	29BB58
Chrysler	Town & Country	2008-2016	29BC59

D

Dodge	Grand Caravan	2008-2020	29BC59
Dodge	Journey	2009-2020	29HR93

F

Ford	Edge	2015-2020	29EC74
Ford	Escape	2013-2019	29EC60
Ford	Escape	2020+	29EC96
Ford	Explorer	2011-2019	29EC71
Ford	Explorer (MXV)	2016-2019	29EC68
Ford	Explorer	2020+	29EC86
Ford	F-150	2009-2014	29EC62
Ford	Flex	2013-2019	29EC71
Ford	Focus	2011-2018	29EC60
Ford	Fusion	2013-2020	29EC77
Ford	Taurus	2010-2019	29EC71

G

GMC	Acadia	2007-2016	29DE55
GMC	Sierra 1500	2014-2018	29DF54
GMC	Sierra 1500	2019+	29DQ81
GMC	Sierra 2500/3500	2015-2019	29DF54
GMC	Terrain	2010-2017	29DE52
GMC	Terrain	2018+	29DQ78
GMC	Yukon	2015-2017	29DF54

All Vehicle Specific ELFA Kits come with the following:

- ELFA Interface Box
- Plug & Play accelerator pedal adapter Harness – no cutting or soldering of wires
- Pre-Programmed Pedal with the proper output, identical to the OEM
- Vehicle Specific mounting Bracket – save time on the install

Specific Electronic Left Foot Accelerators

H

Make	Model	Year(s)	ELFA P/N
Honda	CR-V	2017+	29GG63
Honda	Odyssey	2011-2017	29GV61
Honda	Odyssey	2018+	29GG79
Honda	Pilot	2016+	29GG79
Hyundai	Palisade	2020+	29EW101
Hyundai	Tucson	2016+	29FW83
Hyundai	Santa Fe	2019+	29EW98

J

Jeep	Gladiator	2020+	29BB95
Jeep	Wrangler	2007-2017	29BC72

K

Kia	Sedona	2015-2021	In Development
Kia	Soul	2020+	29EW99
Kia	Telluride	2020+	29FW88

M

Mazda	CX-5	2018+	29EZ91
-------	------	-------	--------

N

Nissan	Atima	2013-2018	29HL70
Nissan	Pathfinder	2013-2021	29HL103
Nissan	Rogue	2014-2020	29HL64
Nissan	Rogue	2021+	29HL105

R

Ram	1500 / 2500 / 3500	2009-2018	29BC66
Ram	1500	2019+	29BC65

S

Subaru	Forester	2019+	29II94
Subaru	Legacy	2015-2019	29II89
Subaru	Outback	2015-2019	29II89

T

Toyota	4Runner	2011-2018	29AI82
Toyota	Camry	2012-2017	29AJ75
Toyota	Corolla	2014-2019	29AJ92
Toyota	Corolla	2020+	29AJ85
Toyota	Corolla Hatchback	2019+	29AJ85
Toyota	RAV4	2019+	29AJ82
Toyota	Sienna	2011-2014	29AI73
Toyota	Sienna	2015-2020	29AJ73
Toyota	Sienna	2021+	In Development

V

Volkswagen	Atlas	2018+	29HK100
Volkswagen	Routan	2009-2013	29BC59

All Vehicle Specific ELFA Kits come with the following:

- ELFA Interface Box
- Plug & Play accelerator pedal adapter Harness – no cutting or soldering of wires
- Pre-Programmed Pedal with the proper output, identical to the OEM
- Vehicle Specific mounting Bracket – save time on the install

Vehicle Specific Veigel Pedal Guards

A

<u>Make</u>	<u>Model</u>	<u>Year(s)</u>	<u>Pedal Guard P/N</u>
Acura	RDX	2019+	54553

B

Buick	Enclave	2018+	54548
Buick	Envision	2016-2020	54567

C

Cadillac	Escalade	2007-2014	54520
Cadillac	Escalade	2015-2018	54520
Cadillac	XT5	2017+	54548
Cadillac	XT5	2013-2019	54531
Chevrolet	Blazer	2019+	54548
Chevrolet	Camaro	2016+	54540
Chevrolet	Cruze	2011-2015	54518
Chevrolet	Equinox	2010-2017	54514
Chevrolet	Equinox	2018+	54545
Chevrolet	Impala	2014-2020	54531
Chevrolet	Malibu	2008-2012	54511
Chevrolet	Malibu	2016-2020	54513
Chevrolet	Silverado 1500	2007-2013	54520
Chevrolet	Silverado 2500/3500	2007-2014	54520
Chevrolet	Silverado 1500	2014-2019	54520
Chevrolet	Silverado 1500	2019+	54549
Chevrolet	Silverado LD	2019	54520
Chevrolet	Silverado 2500/3500	2015-2019	54520
Chevrolet	Suburban	2007-2014	54520
Chevrolet	Suburban	2015-2018	54520
Chevrolet	Suburban	2019+	54549
Chevrolet	Tahoe	2007-2013	54520
Chevrolet	Tahoe	2015-2018	54520
Chevrolet	Tahoe	2019+	54549
Chevrolet	Traverse	2009-2017	54536
Chrysler	200	2015-2017	54519
Chrysler	300/300C	2011-2017	54523
Chrysler	Pacifica	2017+	54539
Chrysler	Town & Country	2001-2007	54530
Chrysler	Town & Country	2008-2016	54526

D

Dodge	Caravan	2001-2007	54530
Dodge	Challenger	2008-2020	54523
Dodge	Charger	2011-2020	54523
Dodge	Grand Caravan	2001-2007	54530
Dodge	Grand Caravan	2008-2020	54526
Dodge	Journey	2009-2020	54563

F

Ford	Edge	2015-2020	54543
Ford	Escape	2013-2019	54524
Ford	Escape	2020+	54566
Ford	Explorer	2011-2019	54521
Ford	Explorer (MXV)	2016-2019	54538
Ford	Explorer	2020+	54556
Ford	F-150	2009-2014	54516
Ford	F-150	2015-2020	54517
Ford	Flex	2009-2019	54521
Ford	Focus	2012-2018	54524
Ford	Fusion	2010-2012	54560
Ford	Fusion	2013-2020	54543
Ford	Taurus	2010-2018	54535

G

GMC	Acadia	2007-2016	54536
GMC	Sierra 1500	2007-2013	54520
GMC	Sierra 2500/3500	2007-2014	54520
GMC	Sierra 1500	2014-2018	54520
GMC	Sierra 2500/3500	2015+	54520
GMC	Terrain	2010-2017	54514
GMC	Terrain	2018+	54545
GMC	Yukon	2007-2013	54520
GMC	Yukon	2015-2018	54520

Vehicle Specific Veigel Pedal Guards

H

<u>Make</u>	<u>Model</u>	<u>Year(s)</u>	<u>Pedal Guard P/N</u>
Honda	Accord	2008-2012	54522
Honda	Accord	2013-2017	54525
Honda	Civic	2012-2015	54534
Honda	CR-V	2017+	54525
Honda	Element	2003-2011	54527**
Honda	Odyssey	2005-2017	54532
Honda	Odyssey	2018+	54544
Honda	Passport	2019+	54555
Honda	Pilot	2016+	54544
Hyundai	Tucson	2016+	54552
Hyundai	Santa Fe	2019+	54568

J

Jeep	Cherokee	2014+	54519
Jeep	Gladiator	2020+	54565
Jeep	Grand Cherokee	2011-2020	54515
Jeep	Wrangler	2007-2017	54512

K

Kia	Niro	2017+	54562
Kia	Sedona	2015-2021	54571
Kia	Seltos	2021+	54574
Kia	Soul	2020+	54569
Kia	Telluride	2020+	54557

L

Lincoln	MKT	2010-2017	54521
Lincoln	MKZ	2010-2012	54560

M

Mazda	CX-5	2018+	54561
Mercury	Milan	2010-2011	54560

N

Nissan	Altima	2013-2018	54541
Nissan	Rogue	2014-2020	54546
Nissan	Rogue	2021+	54575

R

Ram	1500 / 2500 / 3500	2009-2018	54537
Ram	1500	2019+	54547

S

Subaru	Ascent	2019+	54573
Subaru	Forester	2019+	54564
Subaru	Legacy	2015-2019	54559
Subaru	Outback	2015-2019	54559
Subaru	Outback	2020+	54564

T

Tesla	Model X	2016+	54558
Toyota	4Runner	2010-2020	54551
Toyota	Camry	2012-2017	54542
Toyota	Camry	2018+	54550
Toyota	Corolla	2019+	54554
Toyota	Corolla Hatchback	2020+	54554
Toyota	RAV4	2019+	54550
Toyota	Sienna	2004-2010	54529
Toyota	Sienna	2011-2020	54533
Toyota	Sienna	2021+	54572

V

Volkswagen	Atlas	2018+	54570
------------	-------	-------	-------

*The Honda Element has a specific receiver but the arm is a universal and will need to be bent.

3700 Push Pull Quad Floor Mount

C			
Make	Model	Year(s)	3700 Bracket P/N
Chrysler	Pacifica	2017+	69813
Chrysler	Town & Country	2008-2016	69802-000
D			
Dodge	Grand Caravan	2008-2020	69802-000
H			
Honda	Odyssey	2011-2017	69810-000
Honda	Odyssey	2018+	69817
T			
Toyota	Sienna	2011-2020	69806-000

3300, 3400, 3500 & 3850 Hand Controls

Acura

Model	Year(s)	Bracket	Comments
CL	1997-2003	68665-1	
CSX	2006-2011	Not Yet Available	
EL	2001-2005	Not Yet Available	
ILX	2013+	68751-000 (See Page 31)	
Integra	1990-2001	68665-1	
Legend	1991-1995	68665-1	
MDX	2001-2006	68665-1	
MDX	2007+	68751-000 (See Page 31)	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
RDX	2007-2018	68751-000 (See Page 31)	
RDX	2019+	69819	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
RL	1996-2001	68657-000	
RL	2002-2007	68771-000 (See Page 32)	
RLX	2014+	68751-000 (See Page 31)	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
RSX	2002-2006	68657-000	
TL	1996-2001	68657-000	
TL	2002-2007	68771-000 (See Page 32)	
TL	2008-2014	68751-000 (See Page 31)	
TLX	2015+	68751-000 (See Page 31)	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
TSX	2004-2014	68751-000 (See Page 31)	
ZDX	2010-2013	Not Yet Available	

Alfa Romeo

Giulia	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
--------	-------	-------------------	--

Audi

A3	2005-2008	68657-000	
A3	2009-2012	68747-000 (See Page 31)	
A3	2013+	68771-000 (See Page 32)	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A4	1997-2005	68657-000	
A4	2006-2008	68747-000 (See Page 31)	
A4	2009-2016	68751-000 (See Page 31)	
A4	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A4 Allroad Quattro	2009-2016	68751-000 (See Page 31)	
A4 Allroad Quattro	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A5	2008-2017	68751-000 (See Page 31)	12-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A5	2018+	68791-000 (See Page 33)	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A6	1998-2007	68657-000	
A6	2008-2011	68747-000 (See Page 31)	
A6	2012-2018	Not Yet Available	12-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A6	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A6 Allroad Quattro	2006-2007	68657-000	
A6 Allroad Quattro	2008-2012	68747-000 (See Page 31)	
A6 Allroad Quattro	2013-2018	Not Yet Available	13-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A6 Allroad Quattro	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A7	2010-2018	Not Yet Available	12-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A7	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
A8	2003+	Not Yet Available	03+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Allroad Quattro e-tron	1999-2005 2020+	68657-000 Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Q3	2015-2019	68657-000	
Q5	2009-2017	68657-000	
Q5	2018+	Not Yet Available	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

3300, 3400, 3500 & 3850 Hand Controls

Acura

Model	Year(s)	Bracket	Comments
Q7	2006-2015	68657-000	
Q7	2017+	68791-000 (See Page 33)	
Q8	2019+	Not Yet Available	
S4	2007-2016	68657-000	
S4	2018+	68657-000	
S5	2008-2016	68657-000	
TT	2008-2015	68657-000	11-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
TT	2016+	Not Yet Available	2016+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

BMW

1 Series	2007-2017	68665-1	07-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
2 Series	2014+	Not Yet Available	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
3 Series	2001-2011	68665-1	
3 Series	2012-2018	Not Yet Available	12-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
4 Series	2014+	68665-1	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
5 Series	1995-2016	68657-000	11-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
5 Series	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
6 Series	2004-2010	68665-1	
6 Series	2011+	Not Yet Available	11+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
7 Series	2008+	Not Yet Available	11+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
8 Series	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
i3	2014-2018	Not Yet Available	
i8	2015+	Not Yet Available	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
M3	2007-2013	68665-1	12-13 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
M3	2014+	Not Yet Available	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
M4	2014+	Not Yet Available	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
M6	2006-2010	68791-000 (See Page 33)	
M6	2011-2017	Not Yet Available	14-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X1	2014+	Not Yet Available	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X2	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X3	2004-2017	68665-1	04-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X3	2018+	Not Yet Available	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X4	2015+	Not Yet Available	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X5	1999-2013	68657-000	
X5	2014+	Not Yet Available	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X6	2009-2014	Not Yet Available	
X6	2015+	68657-000	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
X7	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Z4	2003-2008	68665-1	03-08 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Buick

Cascada	2016-2019	Not Yet Available	16-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Century	1982-1996	68664-000 (See Page 30)	
Century	1997-2005	68665-1	
Elantra	1971-1984	68657-000	
Elantra	1985-1987	68662-000 (See Page 30)	
Elantra	1988-1990	68657-000	

3300, 3400, 3500 & 3850 Hand Controls

Buick Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
Enclave	2008-2017	68794-000 (See Page 33)	
Enclave	2018+	68791-000 (See Page 33)	
Encore	2013-2019	68665-1	13-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Encore	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Encore GX	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Envision	2016-2020	68820 (See Page 35)	16-20 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Grand National	1984-1987	68621-000	
LaCrosse	2005-2016	68665-1	05-09 May have manual tilt / 10-16 Offset Handle Recommended
LaCrosse	2017-2019	Not Yet Available	17-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
LeSabre	1977-1986	68657-000	
LeSabre	1987-1989	68769-000 (See Page 32)	
LeSabre	1990-2005	68665-1	
Lucerne	2006-2011	68657-000	06-11 May need Auxiliary Offset Bracket P/N 68620-000
Park Avenue	1991-2005	68665-1	91-05 May have a one piece dash
Rainier	2004-2007	68769-000 (See Page 32)	
Reatta	1988-1991	68657-000	
Regal	1978-1984	68665-1	
Regal	1985-1987	68662-000 (See Page 30)	
Regal	1988-2004 / 2011-2017	68665-1	
Regal	2018-2020	Not Yet Available	18-20 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Regal TourX	2018-2020	Not Yet Available	18-20 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Rendezvous	2002-2007	68665-1	
Riviera	1966-1999	68665-1	
Roadmaster	1991-1996	68661-000 (See Page 30)	
Skylark	1986-1998	68663-000 (See Page 30)	
Terraza	2005-2007	68663-000 (See Page 30)	May need Auxiliary Offset Bracket P/N 68620-000
Verano	2012-2017	68665-1	12-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Cadillac

Allanté	1987-1993	68665-1	
ATS	2013-2019	68665-1	13-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Brougham	1987-1992	68657-000	
Catera	1997-2001	68665-1	
CT4	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
CT5	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
CT6	2016+	68791-000 (See Page 33)	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
CTS	2004-2007	68661-000 (See Page 30)	Offset handle recommended
CTS	2008-2013	68769-000 (See Page 32)	08-13 may have power tilt and a telescopic column. Offset handle recommended. May have a wide gas pedal. 2 Coupling Nuts (P/N 83033-000) are needed for the install.
CTS	2014-2019	68665-1	14-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
CTS-V	2011-2015	68769-000 (See Page 32)	11-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
CTS-V	2016+	Not Yet Available	May have power tilt and a telescopic column. Offset handle recommended.
Deville	1971-1976 / 1991-1993	68657-000	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Deville	1977-1984	68663-000 (See Page 30)	91-93 Offset handle recommended
Deville	1985-1990	68769-000 (See Page 32)	
Deville	1994-1999	68664-000 (See Page 30)	Offset handle recommended
Deville	2000-2005	68665-1	May need Auxiliary Offset Bracket P/N 68620-000
DTS	2006-2011	68661-000 (See Page 30)	06-11 May have power tilt and a telescopic column, if they do the motors might need to be removed. Offset handle recommended.
Eldorado	1971-2002	68665-1	92-02 Offset handle recommended

3300, 3400, 3500 & 3850 Hand Controls

Cadillac Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
ELR	2014, 2016	Not Yet Available	14, 16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Escalade	1999-2000	68665-1	
Escalade	2002-2014	68756-000 (See Page 31)	07-14 Will not work with power tilt/telescoping steering wheel.
Escalade	2015-2020	68808 (See Page 34)	
Fleetwood	1985-1996	68621-000	
Seville	1992-1997	68665-1	
Seville	1998-2004	68621-000	Offset handle recommended
Sixty Special	1987-1993	68665-1	
SRX	2004-2009	68756-000 (See Page 31)	
SRX	2010-2016	68665-1	
STS	2005-2011	68657-000	06-11 May have power tilt and a telescopic column, if they do the motors might need to be removed. Offset handle recommended.
XLR	2004-2009	Not Yet Available	04-09 May have power tilt and a telescopic column, if they do the motors might need to be removed. Offset handle recommended.
XT4	2019+	68665-1	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
XT5	2017+	68771-000 (See Page 32)	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
XT6	2020+	68771-000 (See Page 32)	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
XTS	2013-2019	68665-1	13-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Chevrolet

Astro	1985-1991	68662-000 (See Page 30)	
Astro	1992-1997	68769-000 (See Page 32)	
Astro	1998-2005	68665-1	
Avalanche	2002-2013	68756-000 (See Page 31)	
Aveo	2004-2011	68665-1	
Beretta	1987-1996	68662-000 (See Page 30)	
Blazer	1995-2005	68665-1	
Blazer	2019+	68771-000 (See Page 32)	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Bolt	2017+	68665-1	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
C/K	1967-1984	68665-1	
C/K	1985-1994	68662-000 (See Page 30)	
C/K	1995-1998	68657-000	
Camaro	1967-1990	68621-000	
Camaro	1991-2001	68769-000 (See Page 32)	
Camaro	2010-2012	68774-000 (See Page 32)	10-12 May have a one piece dash
Camaro	2013-2015	68747-000 (See Page 31)	13-15 May have a one piece dash
Camaro	2016+	68665-1	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Caprice	1971-1976	68621-000	
Caprice	1977-1990	68663-000 (See Page 30)	
Caprice	1991-1996	68769-000 (See Page 32)	
Cavaller	1982-1987	68657-000	
Cavaller	1985-2005	68665-1	92-05 May have a one piece dash
Chevelle	1964-1977	68621-000	
Cobalt	2005-2010	68771-000 (See Page 32)	
Colorado	2004-2012	68665-1	
Colorado	2015+	68791-000 (See Page 33)	15+ (2) Coupling Nuts (P/N 83033-000) are needed for the install.
Corsica	1987-1992	68657-000	
Corsica	1993-1996	68665-1	
Corvette	1975-1984	68657-000	
Corvette	1985-1996	68771-000 (See Page 32)	
Corvette	1997-2013	68665-1	
Corvette	2014-2019	Not Yet Available	
Corvette	2020+	Not Yet Available	
Cruze	2011-2015	68665-1	11-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended. Needs Auxiliary Offset Bracket #2 (P/N 68619-000) & 24" Gas Rod Assembly (P/N 58575).
Cruze	2016-2019	68665-1	16-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
El Camino	1973-1987	68657-000	

3300, 3400, 3500 & 3850 Hand Controls

Chevrolet Continued

Model	Year(s)	Bracket	Comments
Equinox	2005-2009	68771-000 (See Page 32)	Needs Auxiliary Offset Bracket #1 (P/N 68620-000), Gas Clamp (P/N 69558-000) & 24" Gas Rod Assembly (P/N 58575)
Equinox	2010-2017	68777-000 (See Page 32)	
Equinox	2018+	68800-000 (See Page 34)	14-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) May need Auxiliary Offset Bracket #1 P/N 68620-000.
Express	1996-2002	68728-000 (See Page 30)	
Express	2003-2018	68665-1	
HHR	2006-2011	68771-000 (See Page 32)	
Impala	1961-1996	68621-000	
Impala	2000-2019	68665-1	
K5 Blazer	1973-1994	68662-000 (See Page 30)	04-12 May have a one piece dash. Offset handle recommended. 08-12 May need Auxiliary Offset Bracket #1 P/N 68620-000. 98-03 May have a one piece dash. Offset handle recommended. 13-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2). Needs Auxiliary Offset Bracket #1 (P/N 68620-000). 16-2019 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket #2 (P/N 68619-000).
Lumina	1990-1994	68657-000	
Lumina	1995-2001	68665-1	
Malibu	1978-1983	68657-000	
Malibu	2004-2012	68771-000 (See Page 32)	
Malibu	1997-2003 / 2013-2015	68665-1	
Malibu	2016-2019	68771-000 (See Page 32)	
Malibu Maxx	2004-2007	68665-1	14-19 Needs Auxiliary Offset Bracket (P/N 68620-000) & Gas Clamp (P/N 69558-000). 14-19 Needs Auxiliary Offset Bracket (P/N 68620-000) & Gas Clamp (P/N 69558-000). 20+ Needs Auxiliary Offset Bracket (P/N 68620-000) & Gas Clamp (P/N 69558-000). 12+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended. 13-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended. 16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended. 14-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) 2010 unit has adj gas and brake. All ties into the driver seat. You may not be able to disable the wiring. You may have to just cover the dash button and the door panel button.
Metro	1998-2001	68621-000	
Monte Carlo	1970-2007	68665-1	
Prizm	1998-2001	68665-1	
S-10	1982-1984	68621-000	
S-10	1985-1994	68662-000 (See Page 30)	
S-10	1995-2004	68665-1	
S-10 Blazer	1983-1984	68665-1	
S-10 Blazer	1985-1994	68662-000 (See Page 30)	
Silverado 1500/2500/3500	1999-2013	68756-000	
Silverado 1500/2500/3500	2014-2019	68808 (See Page 34)	
Silverado 1500	2019+	68820 (See Page 35)	
Silverado 2500/3500	2020+	68820 (See Page 35)	
Sonic	2012+	68665-1	
Spark	2013-2015	68665-1	
Spark	2016+	68791-000 (See Page 33)	
SS	2014-2017	68665-1	
SSR	2003-2006	68769-000 (See Page 32)	
Suburban	1984-1994	68662-000 (See Page 30)	
Suburban	1995-1999	68657-000	
Suburban	2000-2014	68756-000 (See Page 31)	
Suburban	2015-2020	68808 (See Page 34)	
Tahoe	1995-1999	68665-1	
Tahoe	2000-2014	68756-000 (See Page 31)	
Tahoe	2015-2020	68808 (See Page 34)	
Tracker	1998-2004	68665-1	
Trailblazer	2002-2009	68769-000 (See Page 32)	
Trailblazer	2021+	Not Yet Available	
			21+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Hand Control Mounting Brackets (Column Mount)

3300, 3400, 3500 & 3850 Hand Controls

Chevrolet Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
Traverse	2009-2017	68794-000 (See Page 33)	Accordion trim around steering column will need to be trimmed to fit bracket.
Traverse Trax	2018+ 2015+	68771-000 (See Page 32) 68791-000 (See Page 33)	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Van	1985-1991	68662-000 (See Page 30)	
Van	1992-1995	68769-000 (See Page 32)	
Venture	1997-2005	69760-000	
Volt	2011-2015	68665-1	12-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Volt	2016-2019	Not Yet Available	16-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.

Chrysler

200	2011-2014	68665-1	Offset handle recommended.
200	2015-2017	68759-000 (See Page 31)	15-17 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Needs Auxiliary Offset Bracket #1 (P/N 8620-000) Gas Clamp (P/N 69558-000) (2) 5/16" Washers (P/N 82005-000) (2) M8-1.25 x 35mm HHCS (P/N 80055-000) & (2) 5/16-18 x 3" HHCS (P/N 80067-000).
300	2005-2010	68665-1	
300	2011-2018	68780-000 (See Page 32)	11-17 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2)
Aspen	2007-2009	68665-1	
Cirrus	1995-2000	68665-1	
Concorde	1993-2004	68657-000	
Crossfire	2004-2008	Not Yet Available	
LeBaron	1990-1995	68665-1	
LHS	1994-2001	68665-1	
New Yorker	1988-1996	68665-1	
Pacifica	2004-2008	68657-000	04-08 May need to remove knee bolster air bag, if so you need a CV shunt. Offset handle recommended.
Pacifica	2017+	68815 (See Page 34)	17+ May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Need Auxiliary Offset Bracket #2 P/N 68619-000.
PT Cruiser	2001-2010	68665-1	01-10 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended. Use angle on left side of steering wheel. CAUTION of wires, there are many.
Sebring	1995-2010	68665-1	
Town & Country	1990-2000	68665-1	
Town & Country	2001-2004	69759-000	
Town & Country	2005-2007	68797-000 (See Page 33)	Offset handle recommended. 05-07 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Town & Country	2008-2012	69780-000	08-12 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2)
Town & Country	2013-2016	68783-000 (See Page 33)	13-16 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Voyager	2001-2003	68797-000 (See Page 33)	Offset handle recommended.
Voyager	2020+	Not Yet Available	20+ May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2)

Dodge

Aries	1981-1989	68657-000	
Avenger	1995-2014	68665-1	
Caliber	2007-2012	68665-1	
Caravan	1984-2000	68665-1	
Caravan	2001-2007	68797-000 (See Page 33)	05-07 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Challenger	2008-2019	68780-000 (See Page 32)	May need to relocate a spring tensioned, also may have a wide gas pedal.
Charger	2006-2010	68665-1	
Charger	2011-2019	69780-000	11-17 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.

3300, 3400, 3500 & 3850 Hand Controls

Dodge Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
Dakota	1987-2009	68665-1	May need Auxiliary Offset Bracket #1 P/N 68620-000.
Dart	2013-2016	68759-000 (See Page 31)	13-16 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Needs Auxiliary Offset Bracket #1 (P/N 68620-000) Gas Clamp (P/N 69558-000) (2) 5/16" Washers (P/N 82005-000) (2) M8-1.25 x 35mm HHCS (P/N 80055-000) & (2) 5/16-18 x 3" HHCS (P/N 80067-000).
Durango	1998-2009 / 2011-2016	68665-1	04-09, 11-16 May have knee bolster air bag (3 OHM Universal shunt, P/N 93051-2)
Dynasty	1988-1993	68665-1	
Grand Caravan	1987-2000	68665-1	
Grand Caravan	2001-2004	69759-000	Offset handle recommended.
Grand Caravan	2005-2007	68797-000 (See Page 33)	05-07 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Grand Caravan	2008-2012	69780-000	08-12 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2)
Grand Caravan	2013-2020	68783-000 (See Page 33)	13-20 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2)
Intrepid	1993-2004	68665-1	
Journey	2009-2020	68665-1	11-20 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Magnum	2005-2008	68665-1	
Neon	2002-2005	68665-1	
Nitro	2007-2011	68665-1	Offset handle recommended.
Omni	1978-1990	68625-000	
Ram	1981-1993	68657-000	May need Auxiliary Offset Bracket #1 P/N 68620-000.
Ram 1500/2500/3500	1994-2009	68665-1	May need Auxiliary Offset Bracket #1 P/N 68620-000.
Ram Van	1979-2003	68665-1	
Shadow	1987-1994	68657-000	
Spirit	1989-1995	68665-1	
Sprinter	2004-2010	68665-1	
Stealth	1991-1996	68665-1	
Stratus	1995-2006	68665-1	

Ford

Aerostar	1986-1991	68657-000	
Aerostar	1992-1997	68664-000 (See Page 30)	
Aspire	1994-1997	68657-000	
Bronco	1987-1996	68665-1	
Bronco	2020+	Not Yet Available	
Bronco II	1984-1990	Not Yet Available	
C-Max	2013-2018	68762-2	13-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Contour	1995-2000	68665-1	
Crown Victoria	1992-2011	68661-000 (See Page 30)	
Custom	1949-1951	68665-1	
E-150	1975-1997	68622-000	
E-150	1998-2008	68726-000	
E-150	2009-2014	68753-000	
E-250 / E-350	1992-1997	68622-000	
E-250 / E-350	1998-2008	68726-000	
E-250 / E-350	2009-2014	68753-000	
EcoSport	2018+	68665-1	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Edge	2007-2010	68759-000 (See Page 31)	
Edge	2011-2019	68762-2 (See Page 31)	15-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Escape	2005-2007	68771-000 (See Page 32)	
Escape	2001-2004 / 2008-2012	68665-1	
Escape	2013-2019	68762-2 (See Page 31)	13-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket #1 (P/N 68620-000) & Bent Vertical Shaft (P/N 68046-000) & Gas Clamp (P/N 69558-000).
Escape	2020+	68831 (See Page 35)	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Escort	1981-2002	68665-1	

3300, 3400, 3500 & 3850 Hand Controls

Ford Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
Excursion	2000-2005	68622-000	
Expedition	1997-2002	68657-000	
Expedition	2003-2006	68747-000 (See Page 31)	
Expedition	2007-2017	68765-000	Offset handle recommended.
Explorer	1991-1994	68727-000 (See Page 30)	
Explorer	1995-2001	68765-000 (See Page 31)	
Explorer	2002-2005	68665-1	
Explorer	2006-2010	68747-000 (See Page 31)	
Explorer	2011-2019	68762-2 (See Page 31)	11-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket #2 (P/N 68619-000) & Bent Vertical Shaft (P/N 68046-000) & Gas Clamp (P/N 69558-000). 20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Explorer	2020+	68829 (See Page 35)	
Explorer w/Power Tilt	2020+	68837 (See Page 36)	
Explorer Sport Trac	2001-2005	68765-000 (See Page 31)	
Explorer Sport Trac	2007-2010	68747-000 (See Page 31)	
F-150	1975-1984	68622-000	
F-150	1992-1996	68662-000 (See Page 30)	
F-150	1997-2003	68727-000 (See Page 30)	
F-150	2004-2008	68665-1	
F-150	2009-2014	68791-000 (See Page 33)	
F-150	2015+	68747-000 (See Page 31)	
F-250	1995-2008	68657-000	
F-250	2009-2016	68747-000 (See Page 31)	
F-250	2017+	68665-1	New Generation
F-350	1997-2007	68657-000	
F-350	2008-2016	68747-000 (See Page 31)	
F-350	2017+	68665-1	New Generation
Festiva	1987-1993	68657-000	
Fiesta	1978-1980	Not Yet Available	
Fiesta	2011-2019	68665-1	11-19 May have to trim the Steering Column Cover and trim the bracket. Need to use a wide Gas Pedal Bracket, the gas pedal is thick plastic over an inch thick. A 2 OHM airbag shunt is necessary, P/N 93050-2. The lower driver's side air bag must be removed.2)
Five Hundred	2005-2007	68747-000 (See Page 31)	
Flex	2009-2019	68762-2 (See Page 31)	
Focus	2000-2007	68771-000 (See Page 32)	Offset handle recommended.
Focus	2008-2011	68665-1	
Focus	2012-2018	68762-2 (See Page 31)	12-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket #1 (P/N 68620-000).
Freestar	2004-2007	68657-000	
Freestyle	2005-2007	68747-000 (See Page 31)	
Fusion	2006-2009	68759-000 (See Page 31)	Offset handle recommended.
Fusion	2010-2012	68840 (See Page 35)	Offset handle recommended.
Fusion	2013-2020	68762-2 (See Page 31)	13-20 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Need Auxiliary Offset Bracket #1 (P/N 68620-000) & Gas Clamp (P/N 69558-000).
Maverick	2020+	Not Yet Available	
Mustang	1964-1978	68657-000	
Mustang	1979-1993	68665-1	
Mustang	1994-2004	68657-000	
Mustang	2005-2014	68747-000 (See Page 31)	
Mustang	2015+	68762-2 (See Page 31)	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Probe	1989-1979	68665-1	
Ranger	1985-1992	68662-000 (See Page 30)	
Ranger	1993-2011	68765-000 (See Page 31)	
Ranger	2019+	68791-000 (See Page 33)	New Generation
Taurus	1986-1991	68628-000	
Taurus	1992-2007	68727-000 (See Page 30)	
Taurus / Taurus X	2008-2009	68747-000 (See Page 31)	
Taurus	2010-2019	68762-2 (See Page 31)	
Tempo	1984-1994	68657-000	
Thunderbird	1964-1982 / 1994-2005	68657-000	
Thunderbird	1983-1993	68665-1	
Transit	2015+	68657-000	Replaces the E-Series Van
Transit Connect	2010-2013	68657-000	
Transit Connect	2014-2017	68762-2 (See Page 31)	
Windstar	1995-1998	68657-000	
Windstar	1999-2003	68727-000 (See Page 30)	

3300, 3400, 3500 & 3850 Hand Controls

Geo (Has been Phased Out as of 1997)

Model	Year(s)	Bracket	Comments
Metro	1989-1997	Not Yet Available	
Prizm	1989-1997	68665-1	
Storm	1990-1993	68665-1	
Tracker	1989-1997	68657-000	

GMC

Acadia	2007-2016	68794-000 (See Page 33)	
Acadia	2017+	68771-000 (See Page 32)	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Canyon	2004-2012	68665-1	
Canyon	2015+	68791-000 (See Page 33)	2 Coupling Nuts (P/N 83033-000) are needed for the install.
Envoy	2002-2009	68769-000 (See Page 32)	
Hummer EV	2022+	Not Yet Available	
Jimmy	1992-2005	68665-1	
S-15	1982-1990	68621-000	
Safari	1985-1991	68662-000 (See Page 30)	
Safari	1992-1997	68769-000 (See Page 32)	
Safari	1998-2005	68665-1	
Savana	1996-2002	68728-000 (See Page 30)	
Savana	2003-2018	68665-1	
Sierra 1500/2500/3500	1999-2013	68756-000 (See Page 31)	
Sierra 1500/2500/3500	2014-2019	68808 (See Page 34)	14-19 Needs Auxiliary Offset Bracket #1 (P/N 68620-000) & Gas Clamp (P/N 69558-000).
Sierra 1500	2019+	68820 (See Page 35)	14-19 Needs Auxiliary Offset Bracket (P/N 68620-000) & Gas Clamp (P/N 69558-000).
Sierra 2500/3500	2020+	68820 (See Page 35)	20+ Needs Auxiliary Offset Bracket (P/N 68620-000) & Gas Clamp (P/N 69558-000).
Sonoma	1991-1993	68621-000	
Sonoma	1994-2004	68665-1	
Terrain	2010-2017	68777-000 (See Page 32)	10-17 Needs Auxiliary Offset Bracket #1 (P/N 68620-000), Gas Clamp (P/N 69558-000) & 24" Gas Rod Assembly (P/N 58575).
Terrain	2018+	68800-000 (See Page 34)	New Generation
Vandura	1981-1995	68662-000 (See Page 30)	
Yukon	1992-1999	68665-1	
Yukon	2000-2014	68756-000 (See Page 31)	
Yukon	2015-2020	68808 (See Page 34)	15-20 Needs Auxiliary Offset Bracket #1 (P/N 68620-000) & Gas Clamp (P/N 69558-000).
Yukon Denali	2001-2014	68756-000 (See Page 31)	
Yukon Denali	2015-2020	68808 (See Page 34)	15-20 Needs Auxiliary Offset Bracket #1 (P/N 68620-000) & Gas Clamp (P/N 69558-000).

Honda

Accord	1986-2002	68665-1	98 - Newer offset handle recommended.
Accord	2003-2007	68771-000 (See Page 32)	98 - Newer offset handle recommended.
Accord	2008-2017	68751-000 (See Page 31)	08-12 May need Auxiliary Offset Bracket #1 P/N 68620-000 and a offset handle recommended.
Accord Crosstour	2010-2011	68751-000 (See Page 31)	
Civic	1988-1991	68657-000	
Civic	1992-2000	68665-1	93 - Newer offset handle recommended.
Civic	2001-2005	68771-000 (See Page 32)	93 - Newer offset handle recommended.
Civic	2006-2015	68751-000 (See Page 31)	
Civic	2016+	68880-000 (See Page 34)	
CR-V	1996-2001	68657-000	
CR-V	2002-2011	68771-000 (See Page 32)	Offset handle recommended.
CR-V	2012-2016	68751-000 (See Page 31)	
CR-V	2017+	68812 (See Page 34)	
Crosstour	2012-2015	68751-000 (See Page 31)	
Element	2003-2011	68657-000	Not for live steering application. The steering column may turn with the wheel.
Fit	2002-2007	68657-000	
Fit	2008+	68751-000 (See Page 31)	
HR-V	2016+	68665-1	
Insight	2000-2006	68771-000 (See Page 32)	
Insight	2010-2014	68751-000 (See Page 31)	
Insight	2019+	Not Yet Available	
Odyssey	1995-1998	68657-000	
Odyssey	1999-2004	68665-1	
Odyssey	2005-2017	68751-000 (See Page 31)	
Odyssey	2018+	68804 (See Page 34)	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

3300, 3400, 3500 & 3850 Hand Controls

Honda Continued

Model	Year(s)	Bracket	Comments
Passport	1994-2002	68665-1	
Passport	2019+	68826 (See Page 35)	
Pilot	2003-2008	68767-000 (See Page 32)	
Pilot	2009-2015	68751-000 (See Page 31)	
Pilot	2016+	68826 (See Page 35)	
Prelude	1992-1996	68665-1	
Ridgeline	2006-2014	68767-000 (See Page 32)	
Ridgeline	2017+	68665-1	

Hummer (Has been Phased Out as of 2010)

H1	1992-2004, 2006	Not Yet Available	
H2	2003-2009	68769-000 (See Page 32)	
H3	2005-2010	68665-1	
H3T	2009-2010	68657-000	

Hyundai

Accent	1995-2017	68665-1	
Accent	2018+	Not Yet Available	
Azera	2006-2011	68657-000	
Azera	2012-2017	68665-1	
Elantra	1992-2007	68661-000 (See Page 30)	Offset handle recommended.
Elantra	2008-2016	68665-1	11-16 Needs Auxiliary Offset Bracket #1 (P/N 68620-000). Offset handle recommended.
Elantra	2017+	68665-1	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Elantra GT	2013-2017	68665-1	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Entourage	2007-2009	68665-1	
Equus	2011-2016	Not Yet Available	11-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Genesis	2009-2014	68665-1	
Genesis	2015-2016	Not Yet Available	15-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Genesis G80	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
GT	2013-2017	68665-1	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Ioniq	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Kona	2018+	68665-1	
Palisade	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Santa Fe	2001+	68665-1	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Santa Fe Sport	2013-2018	68665-1	13-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket # (P/N 68619-000). Offset handle recommended.
Sonata	1999-2014	68665-1	Offset handle recommended.
Sonata	2015+	Not Yet Available	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Tiburon	2003-2008	68665-1	
Tucson	2005-2015	68665-1	
Tucson	2016+	68665-1	Needs Auxiliary Offset Bracket # (P/N 68619-000).
Veloster	2012-2017	68665-1	
Veloster	2019+	Not Yet Available	
Venue	2020+	Not Yet Available	
Veracruz	2007-2012	68665-1	Gas pedal might need: 68158-000 (1), 81019-000 (1), 81042-000 (1), 83012-000 (1) 83036-000 (1) and 83037-000 (1).

Infiniti

EX- Series	2008-2012	Not Yet Available	
FX- Series	2003-2013	68657-000	
G-Series	1991-1996	Not Yet Available	
G-Series	1999-2007	68665-1	
G-Series	2008-2015	68777-000 (See Page 32)	

3300, 3400, 3500 & 3850 Hand Controls

Infiniti Continued

Model	Year(s)	Bracket	Comments
I-Series	1996-2004	68665-1	
J30	1993-1997	68665-1	
M-Series	2006-2010	68657-000	
M-Series	2011-2012	Not Yet Available	
Q50	2014+	68665-1	
QX30	2017+	Not Yet Available	
QX60	2013+	Not Yet Available	
QX70	2014-2017	Not Yet Available	
QX80	2014+	Not Yet Available	

Isuzu (Has been Phased Out as of 2008 in U.S.)

Ascender	2003-2008	Not Yet Available	
Axiom	2002-2004	Not Yet Available	
Rodeo	1991-2003	68665-1	
Trooper	1996-2002	68657-000	

Jaguar

E-Pace	2018+	Not Yet Available	
F-Pace	2017+	Not Yet Available	
XF	2009-2015	68657-000	
XFR	2010-2012	68657-000	
XJ	2010-2017	Not Yet Available	
XK8	1997-2005	Not Yet Available	
S-Type	2000-2006	68657-000	
X-Type	2001-2009	68657-000	01-09 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Jeep

Cherokee	1985-1995	68662-000 (See Page 30)	
Cherokee	1996-2001	68657-000	
Cherokee	2014+	68759-000 (See Page 31)	14+ May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2). Needs Auxiliary Offset Bracket #1 Gas Clamp (P/N 69558-000) (2) 5/16" Washers (P/N 82005-000) (2) M8-1.25 x 35mm HHCS (P/N 80055-000) & (2) 5/16-18 x 3" HHCS (P/N 80067-000).
Commander	2006-2010	68665-1	
Compass	2007-2017	68665-1	Offset handle recommended.
Compass	2018+	68810 (See Page 34)	18+ May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2).
Gladiator	2020+	68839 (See Page 35)	
Grand Cherokee	1993-2010	68665-1	
Grand Cherokee	2011-2016	68791-000 (See Page 33)	Offset handle recommended.
Liberty	2002-2013	68665-1	
Patriot	2007-2017	68665-1	
Renegade	2015+	68665-1	15+ May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended.
Wrangler	1987-1995	68662-000 (See Page 30)	
Wrangler	1997-2018	68665-1	
Wrangler	2018+	68791-000 (See Page 33)	

Kia

Amanti	2004-2010	68665-1	
Borrego	2009-2011	68771-000 (See Page 32)	
Cadenza	2013+	Not Yet Available	
Forte	2010-2013	68657-000	
Forte	2014+	Not Yet Available	
K900	2013-2017	Not Yet Available	
Niro	2017+	68665-1	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Optima	2001-2015	68665-1	
Optima	2016+	Not Yet Available	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Rio	2001-2017	68665-1	
Rio Cinco	2001-2005	68665-1	
Rondo	2007-2017	68665-1	
Sedona	2002-2006	68657-000	
Sedona	2007+	68665-1	
Seltos	2021+	Not Yet Available	
Sephia	1998-2001	68657-000	
Sorento	2003+	68665-1	

3300, 3400, 3500 & 3850 Hand Controls

Kia Continued

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Comments</u>
Soul	2010-2017	68665-1	
Spectra	2000-2009	68665-1	
Sportage	1995-2002 / 2005-2016	68665-1	95-02 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Sportage	2017+	Not Yet Available	
Stinger	2018+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Telluride	2020+	68665-1	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Needs Auxiliary Offset Bracket #2 (P/N 68619-000).

Land Rover

Discovery II	1999-2003	68657-000	
Discovery 3 / Discovery 4	2004-2016	Not Yet Available	15-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2). Needs Auxiliary Offset Bracket #1 (P/N 68620-000).
Freelander	2000-2005	68657-000	
Range Rover	2000-2008	68657-000	
Range Rover Evoque	2011-2017	Not Yet Available	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Range Rover Sport	2006-2013	Not Yet Available	
Range Rover Velar	2018+	Not Yet Available	

Lexus

CT	2011-2017	68665-1	11-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
ES	1992-2006	68665-1	
ES	2007-2012	68771-000 (See Page 32)	07-12 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
ES	2013+	68791-000 (See Page 33)	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
GS	1998-2005	68657-000	
GS	2006-2014	68771-000 (See Page 32)	11-14 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
GX	2003-2005	68657-000	
GX	2006-2009	68771-000 (See Page 32)	
HS	2010-2014	Not Yet Available	10-14 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
IS	2001-2005	68662-000 (See Page 30)	
LC	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
LS	2001-2006	68657-000	
LS	2007-2009	68771-000 (See Page 32)	
NX	2015+	68665-1	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
RC	2015+	Not Yet Available	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
RX	1999-2002	68665-1	
RX	2006-2009	68771-000 (See Page 32)	
RX	2010-2015	68791-000 (See Page 33)	11-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
SC	1992-2006	68657-000	
UX	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Lincoln

Aviator	2003-2005	68665-1	
Aviator	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Continental	1988-2002	68657-000	
Continental	2017+	68762-2 (See Page 31)	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Corsair	2020+	Not Yet Available	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
LS	2000-2006	68657-000	

3300, 3400, 3500 & 3850 Hand Controls

Lincoln Continued

Model	Year(s)	Bracket	Comments
Mark LT	2006-2008	68657-000	
Mark VII / Mark VIII	1984-1992 / 1993-1996	68657-000	
Mark VIII	1997-1998	68661-000 (See Page 30)	
MKC	2015-2019	68762-2 (See Page 31)	15-19 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
MKS	2009-2016	68747-000 (See Page 31)	
MKT	2010-2016	68747-000 (See Page 31)	
MKX	2007-2010	68759-000 (See Page 31)	
MKX	2011-2015	68762-2 (See Page 31)	
MKX	2016-2018	Not Yet Available	16-18 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
MKZ	2010-2012	68840 (See Page 35)	
MKZ	2006-2009 / 2013-2015	68759-000 (See Page 31)	13-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) (2 OHM Universal shunt P/N 93050-2)
MKZ	2016+	68762-2 (See Page 31)	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) 19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Nautilus	2019+	Not Yet Available	
Navigator	1998-2002	68657-000	
Navigator	2003-2006	68747-000 (See Page 31)	
Navigator	2007-2017	68765-000 (See Page 31)	
Navigator	2018+	Not Yet Available	
Town Car	1981-1997	68661-000 (See Page 30)	
Town Car	1998-2011	68665-1	

Maserati

Levante	2017+	Not Yet Available	
Quattroporte	2013+	Not Yet Available	

Mazda

626	1988-2002	68665-1	
B3000	1993-1997	68662-000 (See Page 30)	
B4000	1998-2012	68765-000 (See Page 31)	
CX-3	2016+	Not Yet Available	New Vehicle
CX-5	2013+	68665-1	
CX-7	2007-2012	68759-000 (See Page 31)	
CX-9	2007-2017	68759-000 (See Page 31)	
Mazda2	2011-2016	68665-1	
Mazda3	2010-2013	68762-2	
Mazda3	2014+	Not Yet Available	
Mazda5	2006-2010	68657-000	
Mazda5	2011-2016	68762-2 (See Page 31)	May need Auxiliary Offset Bracket #1 P/N 68620-000.
Mazda6	2003-2005	68657-000	
Mazda6	2006-2012	68759-000 (See Page 31)	
Mazda6	2013+	68665-1	
Millenia	1995-2003	68665-1	
MPV	1996-2006	68665-1	
MX-5 Miata	2006-2015	68665-1	
MX-5 Miata	2016+	Not Yet Available	
Protégé	1995-2003	68665-1	
RX-8	2004-2012	68665-1	
RX-9	2020+	Not Yet Available	
Tribute	2001-2011	68665-1	

Mercedes-Benz

A-Class	2019+	Not Yet Available	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
C-Class	2001-2007	68657-000	
CLA-Class	2014-2017	Not Yet Available	14-17 May have knee bolster air bag
CLS-Class	2005-2010	68657-000	
CLS-Class	2011-2016	Not Yet Available	
E-Class	1995-2004	68665-1	
E-Class	2005-2009	68657-000	
E-Class	2010-2016	68791-000 (See Page 33)	
E-Class	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
GLA-Class	2014+	Not Yet Available	
GLB-Class	2020+	Not Yet Available	
GLC-Class	2016+	Not Yet Available	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

3300, 3400, 3500 & 3850 Hand Controls

Mercedes-Benz Continued

Model	Year(s)	Bracket	Comments
GL-Class	2013-2015	Not Yet Available	
GLE-Class	2016+	68665-1	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
GLK-Class	2010-2016	Not Yet Available	
GLS-Class	2016+	Not Yet Available	
GLE-Class	2016+	68665-1	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
M-Class	2006-2011	Not Yet Available	
M-Class	2012-2015	68665-1	12-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Metris	2016+	Not Yet Available	New Vehicle
R-Class	2006-2012	Not Yet Available	
S-Class	1999-2013	68665-1	
S-Class	2014-2016	Not Yet Available	
SLC-Class	2017+	Not Yet Available	New Generation - Replaces the SLK-Class
SLK-Class	2005-2016	Not Yet Available	
Sprinter	2006-2018	68665-1	

Mercury (Has been Phased Out as of 2011)

Capri	1991-1994	Not Yet Available	
Cougar	1989-1997	68661-000 (See Page 30)	
Cougar	1999-2002	68657-000	
Grand Marquis	1983-1991	68662-000 (See Page 30)	
Grand Marquis	1992-2011	68665-1	
Mariner	2005-2007	68771-000 (See Page 32)	
Mariner	2008-2011	68665-1	
Milan	2006-2011	68759-000 (See Page 31)	
Montego	2005-2007	68747-000 (See Page 31)	
Monterey	2004-2007	68657-000	
Mountaineer	1998-2001	68657-000	
Mountaineer	2002-2005	68665-1	
Mountaineer	2006-2010	68747-000 (See Page 31)	
Sable	1986-1991	68628-000	
Sable	1992-1995	68657-000	
Sable	1996-2005	68727-000 (See Page 30)	
Sable	2008-2009	68747-000 (See Page 31)	
Topaz	1984-1994	68665-1	
Villager	1993-2002	68665-1	

Mini

Clubman	2008-2014	68657-000	
Clubman	2016+	Not Yet Available	
Cooper	2004-2016	68657-000	
Countryman	2010+	Not Yet Available	
Paceman	2013-2016	Not Yet Available	

Mitsubishi

Diamante	1997-2004	Not Yet Available	
Eclipse	2002-2011	68665-1	
Eclipse Cross	2018+	Not Yet Available	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Endeavor	2004-2011	68665-1	
Expo	1992-1995	68665-1	
Galant	1996-2012	68665-1	
Lancer	2000-2007	68665-1	
Lancer	2008-2016	68657-000	11-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Lancer Evolution	2002-2015	68665-1	08-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Mirage	1989-1996	68665-1	
Mirage	2014+	68665-1	
Montero	1993-2003	68665-1	
Montero Sport	1997-2004	68665-1	
Outlander	2003-2006	68657-000	
Outlander	2007-2013	68771-000 (See Page 32)	
Outlander	2014+	68665-1	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Outlander Sport	2011-2016	Not Yet Available	11-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Raider	2006-2009	68665-1	

3300, 3400, 3500 & 3850 Hand Controls

Mobility Ventures

Model	Year(s)	Bracket	Comments
MV-1	2014-2016	68665-1	
Nissan			
Altima	1993-2016	68665-1	
Armada	2004-2016	68665-1	
Cube	2009-2014	68777-000 (See Page 32)	May have to relocate the steering control modular which is located under steering column.
Frontier	1998-2017	68665-1	
GT-R	2007-2016	Not Yet Available	
Hardbody Truck	1986-1997	68665-1	
Juke	2011-2014	68777-000 (See Page 32)	
Juke	2015-2017	68665-1	
Kicks	2018+	Not Yet Available	
Leaf	2011-2017	68665-1	
Maxima	1985-1994	68657-000	
Maxima	1995-2008	68665-1	
Maxima	2009-2014	68777-000 (See Page 32)	
Maxima	2016+	68665-1	
Murano	2003+	68665-1	
NV	2012-2017	Not Yet Available	
Pathfinder	1993-1995	68657-000	
Pathfinder	1996-2012	68665-1	
Pathfinder	2013-2017	68777-000 (See Page 32)	
Quest	1993-2002	68661-000 (See Page 30)	
Quest	2004-2009	68665-1	
Quest	2011-2017	68769-000 (See Page 32)	
Rogue	2008-2013	68777-000 (See Page 32)	2 Coupling Nuts (P/N 83033-000) are needed for the install.
Rogue	2014+	68665-1	
Sentra	1995-2006 / 2013-2017	68665-1	
Sentra	2007-2012	68777-000 (See Page 32)	
Titan	2004-2015	68657-000	
Titan	2016+	Not Yet Available	New Generation
Versa (Hatchback)	2007-2012	68665-1	
Versa (Sedan)	2007-2011	68665-1	
Versa (Sedan)	2012-2017	68777-000 (See Page 32)	
Versa Note	2014-2017	68777-000 (See Page 32)	
Xterra	2000-2012	68665-1	
Oldsmobile (Has been Phased Out as of 2004)			
Achieva	1992-1998	68665-1	
Alero	1999-2004	68665-1	
Aurora	1995-1999	68665-1	
Bravada	1991-1994 / 2002-2004	68769-000 (See Page 32)	
Bravada	1996-2001	68665-1	
Cutlass	1997-1999	68665-1	
Cutlass Ciera	1982-1996	68664-000 (See Page 30)	
Cutlass Supreme	1988-1997	68664-000 (See Page 30)	
Eighty-Eight	1989-1999	68663-000 (See Page 30)	
Intrigue	1998-2002	68665-1	
Nighty-Eight	1977-1996	68665-1	
Silhouette	1990-1996	68664-000 (See Page 30)	
Silhouette	1997-2004	69760-000	
Toronado	1986-1992	68665-1	
Plymouth (Has been Phased Out as of 2001)			
Acclaim	1989-1995	68657-000	
Barracuda	1964-1974	68665-1	
Breeze	1996-2000	68657-000	
Duster	1970-1976	Not Yet Available	
Grand Voyager	1987-2000	68665-1	
Horizon	1978-1990	68625-000	
Neon	1995-2001	68665-1	
Prowler	1997-2002	Not Yet Available	
Sundance	1987-1994	68657-000	
Valiant	1960-1976	Not Yet Available	
Voyager	1984-1995	68657-000	
Voyager	1996-2000	68665-1	

3300, 3400, 3500 & 3850 Hand Controls

Pontiac (Has been Phased Out as of 2010)

Model	Year(s)	Bracket	Comments
Aztec	2001-2005	68665-1	
Bonneville	1992-2005	68663-000 (See Page 30)	
Firebird	1967-1984	68657-000	
Firebird	1985-1990	68662-000 (See Page 30)	
Firebird	1991-2002	68769-000 (See Page 32)	
G5	2005-2009	68771-000 (See Page 32)	
G6	2005-2010	68665-1	
G8	2008-2009	68664-000 (See Page 30)	
Grand Am	1992-2005	68665-1	
Grand Prix	1988-2008	68665-1	
Grand Ville	1971-1975	Not Yet Available	
GTO	1964-1974 / 2004-2006	68665-1	
Montana	1997-2005	69760-000	
Montana SV6	2005-2006	68665-1	
Solstice	2006-2009	68665-1	
Sunbird	1982-1994	68621-000	
Sunfire	1995-2005	68665-1	
Torrent	2006-2009	68771-000 (See Page 32)	
Trans Am	1969-2002	68657-000	
Trans Sport	1990-1996	68664-000 (See Page 30)	
Trans Sport	1997-1999	68665-1	
Vibe	2003-2010	68665-1	03-08 May have a one piece dash Offset handle is recommended.

Porsche

718 Boxster	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
718 Cayman	2017+	Not Yet Available	17+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
911	2005+	Not Yet Available	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Boxster	1997-2016	Not Yet Available	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Cayenne	2004-2010	68665-1	
Cayenne	2011+	Not Yet Available	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Cayman	2006-2016	Not Yet Available	13+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Macan	2015+	Not Yet Available	

Ram

1500 / 2500 / 3500	2010-2019	68665-1	10-19 May need Auxiliary Offset Bracket #1 (P/N 68620-000).
1500	2019+	68818 (See Page 35)	
ProMaster City	2015+	68665-1	
ProMaster	2014+	68771-000 (See Page 32)	

Saab (Has been Phased Out as of 2012)

9-3	1999-2009	68665-1	
9-5	1998-2009	68665-1	

Saturn (Has been Phased Out as of 2010)

Aura	2007-2009	68665-1	
Ion	2003-2007	68771-000 (See Page 32)	
L200 / L300	2002-2005	68665-1	
Outlook	2007-2010	68794-000 (See Page 33)	
Relay	2005-2007	68665-1	
SC	1997-2001	68657-000	
SL	1997-2001	68665-1	
SL1	1991-2001	68665-1	
SL2	1994-2002	68665-1	
Vue	2002-2007	68771-000 (See Page 32)	
Vue	2008-2010	68665-1	

Scion (Has been Phased Out as of 2016)

FR-S	2013-2016	68665-1	
tC	2005-2016	68665-1	05-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
xA	2004-2007	68665-1	04-07 May have a one piece dash Offset handle is recommended.
xB	2004-2015	68665-1	
xD	2008-2014	68665-1	

3300, 3400, 3500 & 3850 Hand Controls

Subaru

Model	Year(s)	Bracket	Comments
Ascent	2019+	68791-000 (See Page 33)	19+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Baja	2003-2006	Not Yet Available	
BRZ	2013+	Not Yet Available	
Crosstrek	2016+	68665-1	16+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Forester	1998-2013	68665-1	Offset handle recommended.
Forester	2014+	68665-1	14+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Impreza	1993-2016	68665-1	Offset handle recommended.
Impreza	1993-2016	68665-1	12-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Legacy	1990-2016	68665-1	Offset handle recommended.
Outback	1995+	68665-1	20+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Tribeca	2006-2009	68665-1	
WRX	2015+	Not Yet Available	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
XV Crosstrek	2013-2015	68665-1	13-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Suzuki (Has been Phased Out as of 2012 in U.S.)

Aerio	2002-2007	68665-1	
Equator	2009-2012	68665-1	
Forenza	2004-2008	68665-1	
Grand Vitara	1995-2005	68665-1	
Kizashi	2010-2014	68771-000 (See Page 32)	
Reno	2004-2008	68665-1	
Verona	2004-2006	68657-000	
XL-7	2001-2009	68657-000	

Tesla

Model S	2012-2017	Not Yet Available	Manufacturer strongly does not recommend Column Mounted Hand Controls.
Model X	2016+	68823 (See Page 35)	Manufacturer strongly does not recommend Column Mounted Hand Controls.

Toyota

4Runner	1996-2017	68665-1	11-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Avalon	1995-2000 / 2013-2017	68665-1	Offset handle recommended.
Avalon	1995-2000 / 2013-2017	68665-1	01-04 May have manual tilt.
Avalon	1995-2000 / 2013-2017	68665-1	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Avalon	1995-2000 / 2013-2017	68665-1	Offset handle recommended.
Avalon	2001-2012	68771-000 (See Page 32)	05-12 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Avalon	2001-2012	68771-000 (See Page 32)	Offset handle recommended.
Camry	1983-2017	68665-1	07-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2).
Camry	1983-2017	68665-1	Offset handle recommended.
Celica	1994-1999	68657-000	
Corolla	1995-2008 / 2014-2016	68665-1	14-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Corolla	2009-2013	68759-000 (See Page 31)	08-11 May have a one piece dash.
Corolla	2009-2013	68759-000 (See Page 31)	Offset handle recommended.
Corolla	2017-2018	68767-000	2017-2018 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Corolla	2017-2018	68767-000	Needs (2) M8-1.25 Panel Extruded U Nut (P/N 57070) & (2) M8-1.25 x 22mm HHCS (P/N 80063-000)
Cressida	1989-1992	68665-1	
Echo	2000-2005	68665-1	Offset handle recommended.
FJ Cruiser	2007-2014	68665-1	Offset handle recommended.
Highlander	2001+	68665-1	11+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Highlander	2001+	68665-1	Offset handle recommended.
Land Cruiser	1999-2007	68665-1	
Land Cruiser	2008+	Not Yet Available	11+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Matrix	2003-2013	68665-1	03-11 May have a one piece dash. On 03-08 May have to pull back center console to access. Offset handle recommended.

3300, 3400, 3500 & 3850 Hand Controls

Toyota Continued

Model	Year(s)	Bracket	Comments
Paseo	1991-1995	68665-1	
Pickup	1989-1994	68665-1	
Previa	1991-1997	68665-1	
Prius	1998+	68665-1	11+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Prius c	2012-2017	68665-1	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Prius v	2012-2017	68665-1	12-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
Rav4	1995-2017	68665-1	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Sequoia	2001-2016	68665-1	11-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Sienna	1998-2003	68657-000	
Sienna	2004-2020	68665-1	11-20 Toyota Sienna will have an air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Sienna	2021+	68844 (See Page 36)	21+ Toyota Sienna will have an air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Solara	1999-2008	68665-1	If unit has fly by wire acceleration, be sure it accelerates properly. May need to contact dealership for any adjustments.
T100	1993-1998	68665-1	
Tacoma	1995-2016	68665-1	
Tundra	2000-2017	68665-1	07-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) The 68665-1 will not work on the 1794 Edition Trim Level.
Venza	2009-2015	68665-1	09-15 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Yaris	2007-2016	68665-1	13-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

Volkswagen

Arteon	2019+	Not Yet Available	New Vehicle
Atlas	2018+	68834 (See Page 36)	18+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2).
Beetle	2012-2017	68771-000 (See Page 32)	
CC	2009-2017	68747-000 (See Page 31)	
Eos	2006-2016	68771-000 (See Page 32)	13-16 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2). Offset handle recommended. May need Auxiliary Offset Bracket #1 (P/N 68620-000).
Golf	1999-2002	68657-000	
Golf	2003-2005	68771-000 (See Page 32)	
Golf	2010-2014	68751-000 (See Page 31)	13-14 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) Offset handle recommended.
Golf	2015+	68771-000 (See Page 32)	15+ May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2) May need Auxiliary Offset Bracket #1 (P/N 68620-000).
Jetta	1985-2006	68657-000	
Jetta	2007-2011	68747-000 (See Page 31)	
Jetta	2012-2017	68771-000 (See Page 32)	13-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)
New Beetle	1998-2000	68657-000	
New Beetle	2001-2010	68771-000 (See Page 32)	
Passat	1998-2004	68657-000	
Passat	2005-2010	68747-000 (See Page 31)	
Passat	2012-2017	68771-000 (See Page 32)	
Rabbit	2006-2009	68747-000 (See Page 31)	
Routan	2009-2012	68783-000	09-12 May have knee bolster air bag (3 OHM Universal shunt P/N 93051-2) Offset handle recommended. (2 OHM Universal shunt P/N 93050-2)

3300, 3400, 3500 & 3850 Hand Controls

Volkswagen Continued

Model	Year(s)	Bracket	Comments
Tiguan	2009-2017	68747-000 (See Page 31)	
Tiguan	2018+	Not Yet Available	New Generation
Touareg	2004-2017	68747-000 (See Page 31)	Offset handle recommended.

Volvo

850	1994-1996	68665-1	
C70	1998-2005	Not Yet Available	
S40	1995-2011	68657-000	
S60	2001-2009	68665-1	04-09 May have a one piece dash
S60	2011-2016	68762-2	May have a one piece dash
S80	1999-2008	68665-1	04-06 May have a one piece dash Offset handle is recommended.
S90	2017+	Not Yet Available	New Vehicle
V50	2004-2011	68665-1	
V70	1998-2001	68665-1	
V70	2002-2016	68762-2	02-07 May have a one piece dash Offset handle is recommended.
XC60	2009-2016	68762-2	
XC70	1998-2007	68665-1	04-07 May have a one piece dash Offset handle is recommended.
XC70	2008-2016	68762-2	May have to remove a box from under the steering column and relocate.
XC90	2003-2014	68665-1	04-11 May have a one piece dash Offset handle is recommended.
XC90	2015-2017	Not Yet Available	15-17 May have knee bolster air bag (2 OHM Universal shunt P/N 93050-2)

4120, 4220 & 4300 Hand Controls

Acura		Classic/Compact		
Model	Year(s)	Bracket	HC Height	Shipping Method
MDX	2014-2020	56105	15.5	Same Day Ship
RDX	2019+	56077	17.5	Same Day Ship
Audi				
A3	2005-2012	56018	15.5	Drop Ship
A3	2013-2016	56030	15.5	Same Day Ship
A4	2009-2016	56028	15.5	Drop Ship
A4	2017+	56076	15.5	Same Day Ship
A5	2008-2017	56028	15.5	Drop Ship
A5	2018+	56076	15.5	Same Day Ship
A6	2012-2016	56028	15.5	Drop Ship
A7	2010-2015	56028	15.5	Drop Ship
A8	2011-2015	56010	15.5	Drop Ship
Q5	2009-2017	56019	15.5	Drop Ship
Q5	2018+	56076	15.5	Same Day Ship
Q7	2006-2015	56011	15.5	Drop Ship
Q7	2017+	56068	17.5	Drop Ship
Buick				
Enclave	2008-2017	56046	17.5	Same Day Ship
Enclave	2018+	56082	17.5	Same Day Ship
Verano	2012-2016	56038	17.5	Same Day Ship
Cadillac				
ATS	2013-2019	56054	15.5	Same Day Ship
CTS	2014-2018	56054	15.5	Same Day Ship
ELR	2014, 2016	56038	17.5	Same Day Ship
Escalade	2006-2014	56029	17.5	Same Day Ship
Escalade	2015-2020	56039-1	17.5	Same Day Ship
XT5	2017+	56096	15.5	Same Day Ship
XTS	2013-2019	56012	15.5	Same Day Ship
Chevrolet				
Blazer	2019+	56096	17.5	Same Day Ship
Cruze	2011-2015	56038	17.5	Same Day Ship
Camaro	2016+	56054	17.5	Same Day Ship
Equinox	2011-2017	56032	17.5	Same Day Ship
Equinox	2018+	56065	17.5	Same Day Ship
Impala	2014-2020	56012	15.5	Same Day Ship
Malibu	2008-2012	56047	15.5	Same Day Ship
Malibu	2013-2015	56012	15.5	Same Day Ship
Malibu	2016+	56053	17.5	Same Day Ship
Orlando	2012-2014	56038	17.5	Same Day Ship
Silverado	2007-2013	56029	17.5	Same Day Ship
Silverado	2014-2018	56039-1	17.5	Same Day Ship
Silverado	2019+	56073	17.5	Same Day Ship
Silverado (ATC)	2014-2018	56045	17.5	Same Day Ship
NOTE: When doing a 14-16 ATC Conversion with a 40-40-20 aftermarket jump seat use 56045.				
Suburban	2007-2014	56029	17.5	Same Day Ship
Suburban	2015-2020	56039-1	17.5	Same Day Ship
Tahoe	2007-2014	56029	17.5	Same Day Ship
Tahoe	2015-2020	56039-1	17.5	Same Day Ship
Tahoe	2021+	56108	15.5	Same Day Ship
Traverse	2009-2017	56046	17.5	Same Day Ship
Traverse	2018+	56082	17.5	Same Day Ship
Volt	2011-2015	56038	17.5	Same Day Ship

*Not all Right Hand Kits are stocked. Please allow a 2-3 week lead time. If your vehicle is not listed above, please call our sales team for availability.

We have hundreds of RHC bracket applications available for drop ship within 2 or 3 weeks.

4120, 4220 & 4300 Hand Controls

Hand Control Mounting Brackets (Specific Seat Rails or Center Console Mount)

Chrysler

Model	Year(s)	Bracket	HC Height	Shipping Method
200	2015-2017	56043	17.5	Same Day Ship
NOTE: You will also need a #2 Mortorq Driver to remove the seat bolts.				
300	2011-2016	56033	17.5	Same Day Ship
Pacifica	2017+	56051	17.5	Same Day Ship
Pacifica	2017+	56059	17.5	Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56059.				
Town & Country	2001-2007	56016	15.5	Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56016.				
Town & Country	2008-2016	56001	17.5	Same Day Ship
Town & Country	2008-2016	56013	17.5	Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56013.				
Town & Country	2008-2016	56052	17.5	Same Day Ship
NOTE: When doing a VMI Lowered Floor use kit 56052.				

Dodge

Caravan	2001-2007	56016	15.5	Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56016.				
Challenger	2008-2020	56033	15.5	Same Day Ship
Charger	2011-2020	56033	17.5	Same Day Ship
Dart	2013-2016	56043	17.5	Same Day Ship
Grand Caravan	2008-2020	56001	17.5	Same Day Ship
Grand Caravan	2008-2020	56013	17.5	Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56013.				
Grand Caravan	2008-2020	56052	17.5	Same Day Ship
NOTE: When doing a VMI Lowered Floor use kit 56052.				
Journey	2009-2020	56090	17.5	Same Day Ship

Fiat

500	2012-2015	56023	17.5	Drop Ship
-----	-----------	-------	------	-----------

Ford

C-Max	2013-2018	56036	17.5	Same Day Ship
Edge	2015-2020	56071	17.5	Same Day Ship
Escape	2013-2019	56036	17.5	Same Day Ship
Escape	2020+	56093	17.5	Same Day Ship
Explorer	2011-2019	56015	17.5	Same Day Ship
Explorer	2020+	56081	17.5	Same Day Ship
Explorer (MXV)	2016-2019	56057	14 / 15.5	Same Day Ship
F-150	2009-2014	56048	17.5	Same Day Ship
NOTE: When doing an F-150 with adjustable pedals use kit 56048.				

F-150	2009-2014	56049	17.5	Same Day Ship
NOTE: When doing an F-150 with non adjustable pedals use kit 56049.				

F-150	2015-2020	56044	17.5	Same Day Ship
Flex	2009-2019	56015	17.5	Same Day Ship
Focus	2012-2018	56036	17.5	Same Day Ship
Freestyle	2005-2007	56006	17.5	Same Day Ship
Fusion	2010-2012	56086	17.5	Same Day Ship
Fusion	2013-2020	56031	17.5	Same Day Ship
Taurus	2010-2019	56031	17.5	Same Day Ship
Taurus X	2008-2009	56006	17.5	Same Day Ship

GMC

Acadia	2007-2016	56046	17.5	Same Day Ship
Acadia	2017 (Limited)	56046	17.5	Same Day Ship
Acadia	2017+	56060	17.5	Same Day Ship
Sierra	2007-2013	56029	17.5	Same Day Ship
Sierra	2014-2018	56039-1	17.5	Same Day Ship
Terrain	2011-2017	56032	17.5	Same Day Ship
Terrain	2018+	56065	17.5	Same Day Ship
Yukon	2007-2014	56029	17.5	Same Day Ship
Yukon / Denali	2015-2020	56039-1	17.5	Same Day Ship
Yukon / Denali	2021+	56108	15.5	Same Day Ship

*Not all Right Hand Kits are stocked. Please allow a 2-3 week lead time. If your vehicle is not listed above, please call our sales team for availability.

4120, 4220 & 4300 Hand Controls

Honda

Model	Year(s)	Bracket	Classic/Compact		Shipping Method
			HC Height		
Accord	2008-2012	56035	17.5		Same Day Ship
Accord	2013-2017	56037	17.5		Same Day Ship
Civic	2012-2015	56040	17.5		Same Day Ship
CR-V	2017+	56067	17.5		Same Day Ship
Element	2003-2011	56002	15.5		Same Day Ship
Odyssey	2005-2010	56003K	17.5		Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56003K.					
Odyssey	2011-2017	56066	17.5		Same Day Ship
Odyssey	2011-2017	56025	17.5		Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56025.					
Odyssey	2018+	56063	17.5		Same Day Ship
Odyssey	2018+	56075	17.5		Same Day Ship
NOTE: When doing a Braun Lowered Floor use kit 56075.					
Odyssey	2018+	56102	17.5		Same Day Ship
NOTE: When doing a VMI Lowered Floor use kit 56102.					
Passport	2019+	56079	17.5		Same Day Ship
Pilot	2016+	56087	15.5 / 17.5		Same Day Ship

Hyundai

Palisade	2020+	56083	17.5		Same Day Ship
Santa Fe	2019+	56095	17.5		Same Day Ship

Jeep

Cherokee	2014+	56043	17.5		Same Day Ship
NOTE: You will also need a #2 Mortorq Driver to remove the seat bolts.					
Gladiator	2020+	56092	15.5		Same Day Ship
Grand Cherokee	2011-2016	56024	17.5		Same Day Ship
Wrangler	2007-2017	56056	17.5		Same Day Ship
Wrangler	2018+	56083	17.5		Same Day Ship

Kia

Niro	2017+	56089	15.5		Same Day Ship
Sedona	2015-2021	56100	15.5		Same Day Ship
Seltos	2021+	56097	15.5		Same Day Shi
Soul	2020+	56097	15.5		Same Day Ship
Telluride	2020+	56083	17.5		Same Day Ship

Lincoln

MKC	2015-2019	56036	17.5		Same Day Ship
MKS	2009-2016	56031	17.5		Same Day Ship
MKT	2010-2017	56015	17.5		Same Day Ship
MKZ	2010-2012	56086	17.5		Same Day Ship

Mazda

CX-5	2017+	56088	15.5		Same Day Ship
------	-------	-------	------	--	---------------

Mercedes-Benz

A-Class	2019+	56101	17.5		Drop Ship
B-Class	2012-2018	56061	17.5		Drop Ship
C-Class	2008-2014	56004	15.5		Drop Ship
C-Class	2015-2017	56041	15.5		Drop Ship
CLS-Class	2006-2011	56008	15.5		Drop Ship
CLS-Class	2018+	56080	15.5		Drop Ship
GLA-Class	2014+	56062	17.5		Drop Ship
GLC-Class	2016+	56106	17.5		Drop Ship
E-Class	2003-2009	56008	15.5		Drop Ship
E-Class	2010-2016	56004	15.5		Drop Ship
E-Class	2017+	56080	15.5		Drop Ship
S-Class	2006-2013	56009	15.5		Drop Ship
S-Class	2014+	56072	15.5		Drop Ship

*Not all Right Hand Kits are stocked. Please allow a 2-3 week lead time. If your vehicle is not listed above, please call our sales team for availability.

We have hundreds of RHC bracket applications available for drop ship within 2 or 3 weeks.

4120, 4220 & 4300 Hand Controls

Mercury

Model	Year(s)	Bracket	Classic/Compact HC Height	Shipping Method
Milan	2010-2011	56086	17.5	Same Day Ship

Nissan

Altima	2013+	56055	17.5	Same Day Ship
Pathfinder	2013-2021	56107	15.5	Same Day Ship
Rogue	2014-2020	56069	17.5	Same Day Ship
Rogue	2021+	56109	15.5	Same Day Ship

Ram

1500 / 2500 / 3500	2009-2018	56050	17.5	Same Day Ship
1500	2019+	56070	17.5	Same Day Ship

Subaru

Ascent	2019+	56104	15.5	Same Day Ship
Forester	2019+	56091	15.5	Same Day Ship
Legacy	2015-2019	56084	15.5	Same Day Ship
Outback	2015-2019	56084	15.5	Same Day Ship

Toyota

Camry	2012-2017	56020	15.5	Same Day Ship
Camry	2018+	56094	15.5	Same Day Ship
Corolla	2009-2013	56021	15.5	Same Day Ship
Corolla	2020+	56078	15.5	Same Day Ship
Corolla Hatchback	2019+	56078	15.5	Same Day Ship
Highlander	2020+	56099	15.5	Same Day Ship
RAV4	2019+	56074	17.5	Same Day Ship
Sienna	2004-2010	56005	17.5	Same Day Ship

NOTE: When doing a Braun Lowered Floor use kit 56005.

Sienna	2011-2017	56026	17.5	Same Day Ship
Sienna	2018-2020	56026-1	17.5	Same Day Ship

NOTE: When doing a Braun Lowered Floor use kit 56026.

Sienna	2021+	56103	15.5	Same Day Ship
--------	-------	-------	------	---------------

Volkswagen

Atlas	2018+	56098	15.5	Same Day Ship
Golf	2010-2014	56018	15.5	Drop Ship
Golf	2015+	56030	15.5	Same Day Ship
Passat	2005-2010	56018	15.5	Drop Ship
Tiguan	2009-2016	56018	15.5	Drop Ship
Touareg	2004-2010	56011	15.5	Drop Ship

*Not all Right Hand Kits are stocked. Please allow a 2-3 week lead time. If your vehicle is not listed above, please call our sales team for availability.

We have hundreds of RHC bracket applications available for drop ship within 2 or 3 weeks.

eClassic Hand Controls

Acura

<u>Model</u>	<u>Year(s)</u>	<u>Bracket</u>	<u>Classic/Compact</u> <u>HC Height</u>	<u>Shipping Method</u>
MDX	2014-2020	75008	14	Same Day Ship

Chevrolet

Tahoe	2021+	75010	14	Same Day Ship
-------	-------	-------	----	---------------

GMC

Yukon	2021+	75010	14	Same Day Ship
-------	-------	-------	----	---------------

Honda

Odyssey (VMI)	2018+	75005	14	Same Day Ship
---------------	-------	-------	----	---------------

Hyundai

Palisade	2020+	75001	14	Same Day Ship
----------	-------	-------	----	---------------

Kia

Sedona	2015-2021	75004	14	Same Day Ship
Telluride	2020+	75001	14	Same Day Ship

Nissan

Pathfinder	2013-2021	75009	14	Same Day Ship
Rogue	2021+	75011	14	Same Day Ship

Subaru

Ascent	2019+	75007	14	Same Day Ship
--------	-------	-------	----	---------------

Toyota

Highlander	2020+	75003	14	Same Day Ship
Highlander	2021+	75006	14	Same Day Ship

Volkswagen







Atlas	2018+	75002	14	Same Day Ship
-------	-------	-------	----	---------------

*Not all Electronic Right Hand Kits are stocked. Please allow a 2-3 week lead time. If your vehicle is not listed above, please call our sales team for availability.







We have hundreds of ERHC bracket applications available for drop ship within 2 or 3 weeks.

Bolt-On Mounting Bracket Diagrams

Hand Control Mounting Brackets (Column Mount)

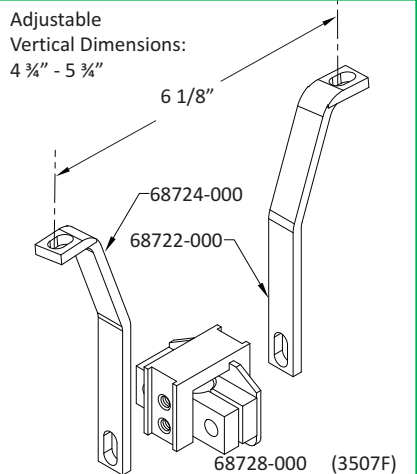
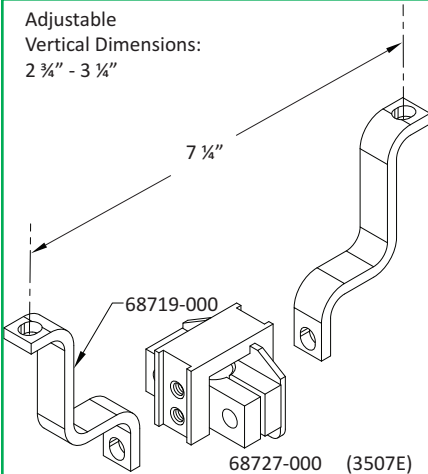
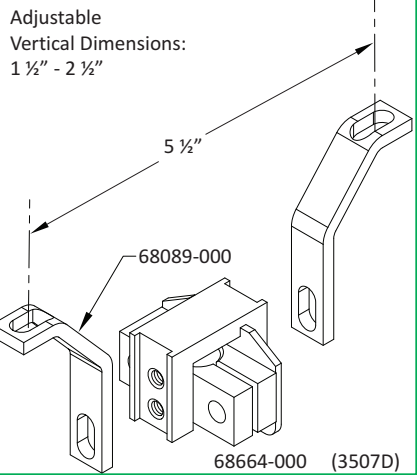
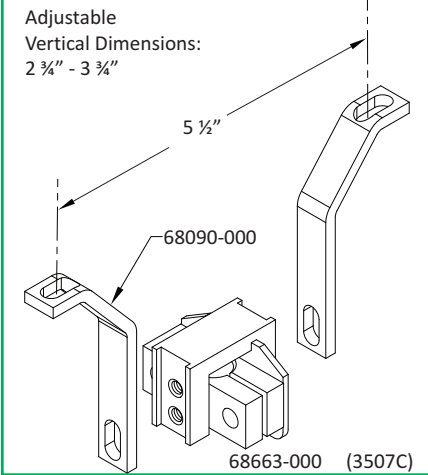
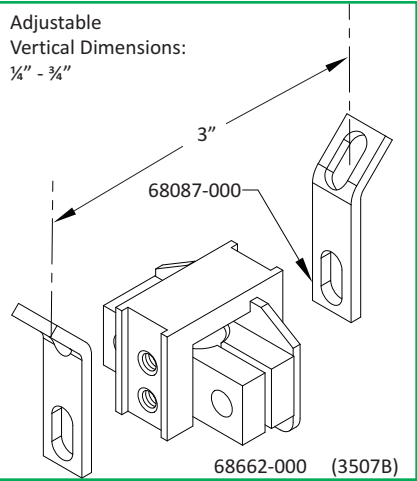
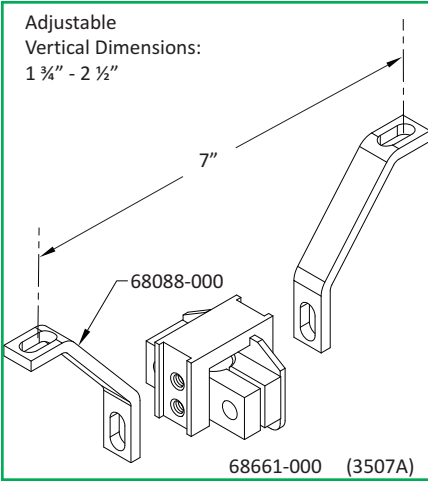


Bolt-On Mounting Bracket Diagrams

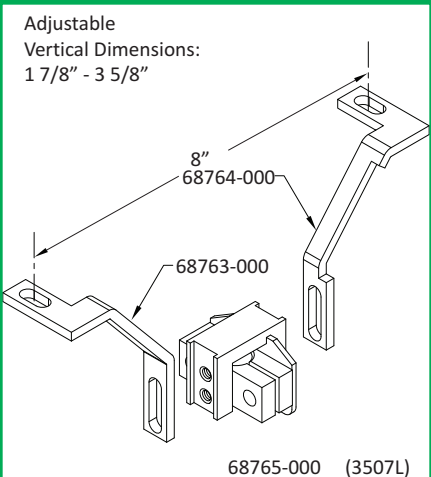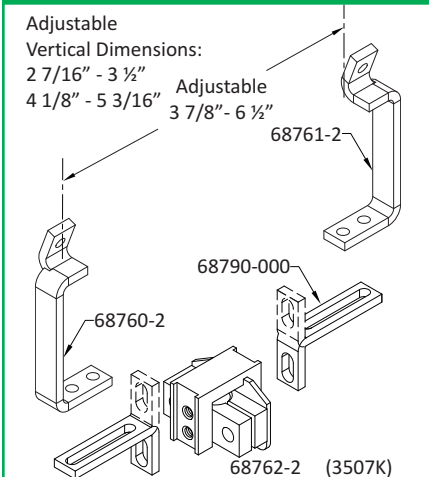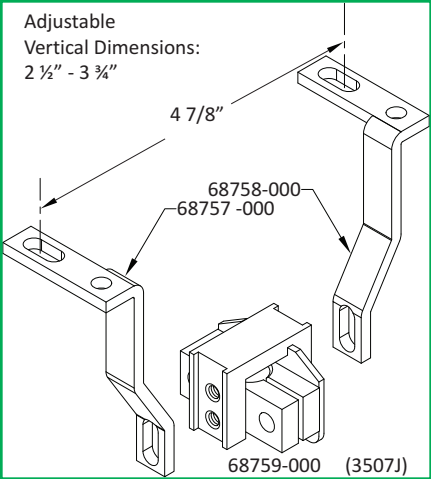
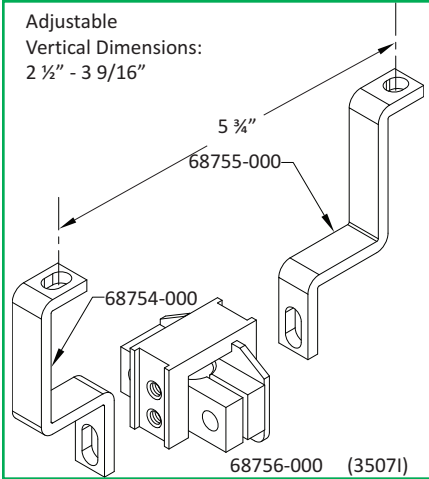
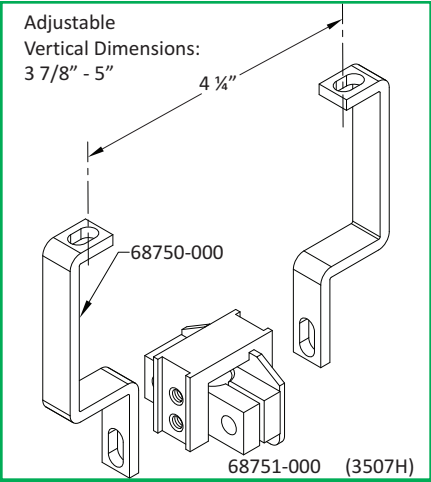
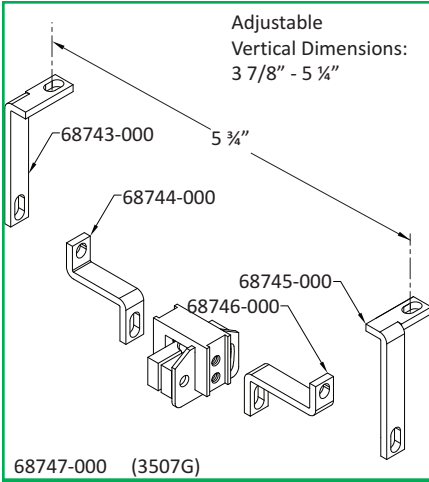


Bolt-On Mounting Bracket Diagrams



Hand Control Mounting Brackets (Column Mount)

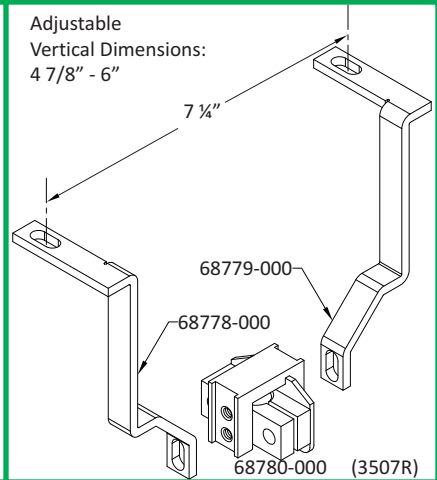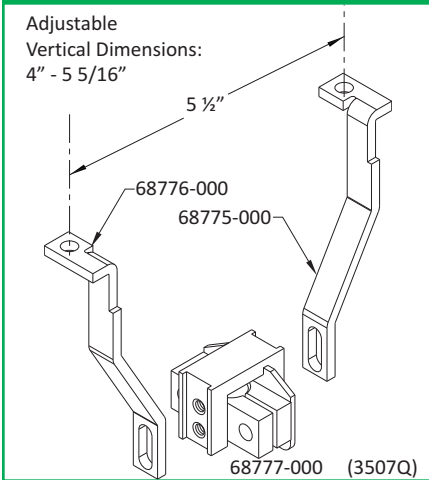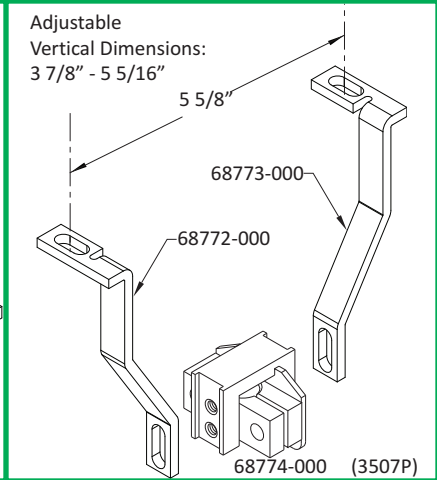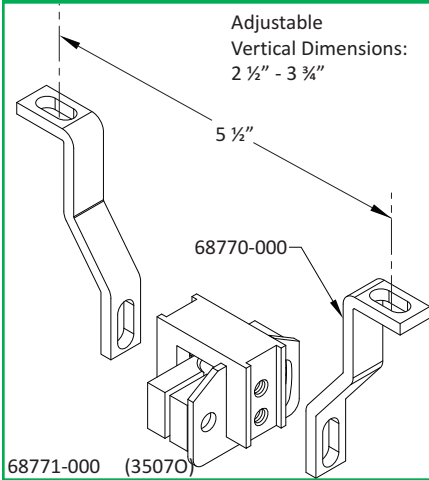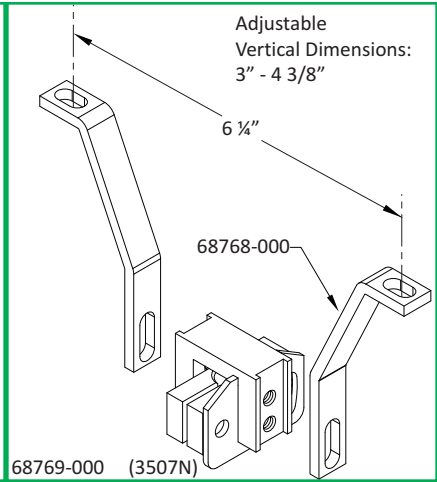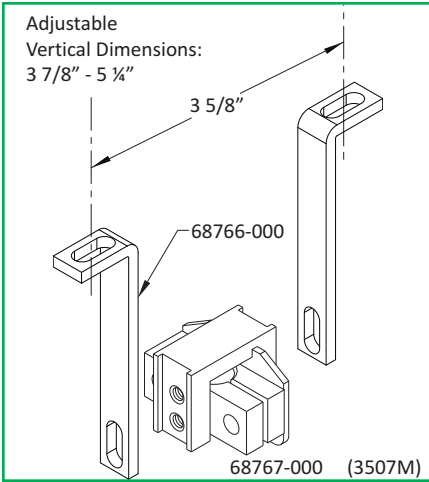

Bolt-On Mounting Bracket Diagrams



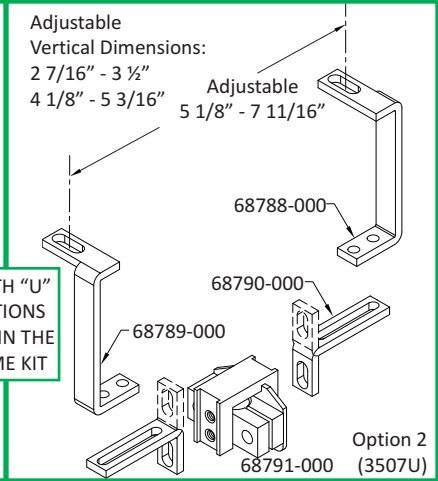
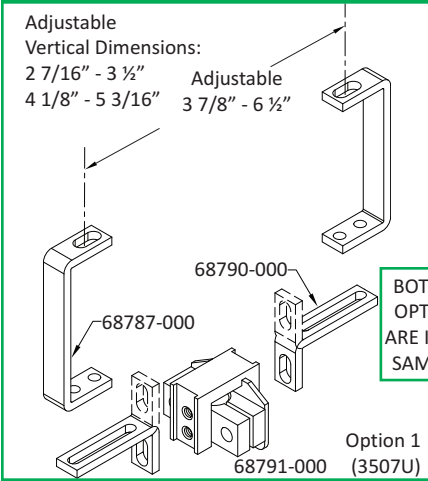
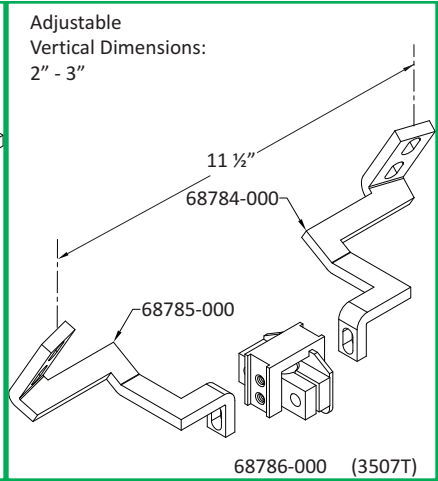
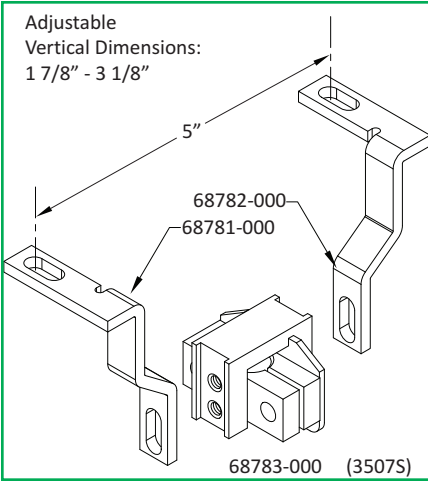


BOTH "U" OPTIONS ARE IN THE SAME KIT

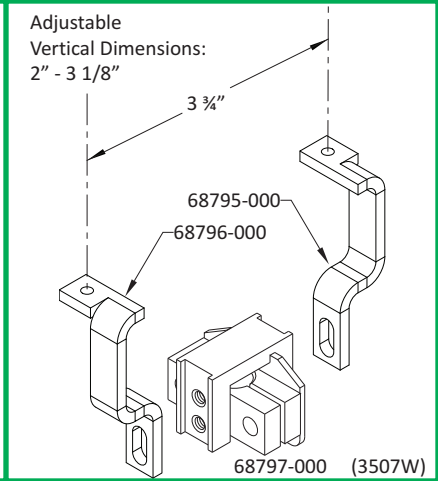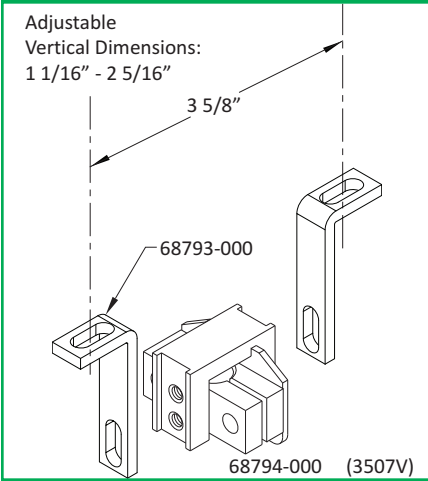


Bolt-On Mounting Bracket Diagrams

Hand Control Mounting Brackets (Column Mount)

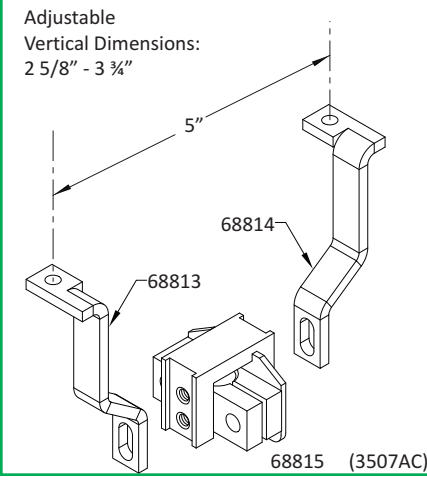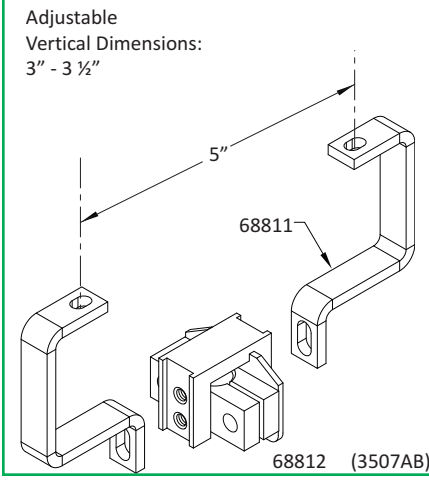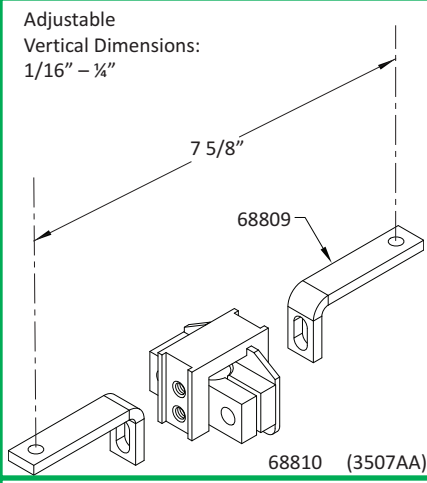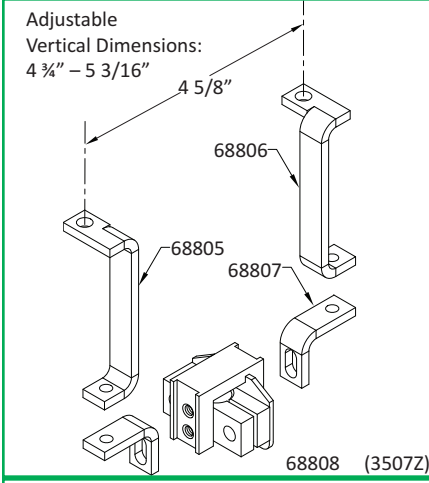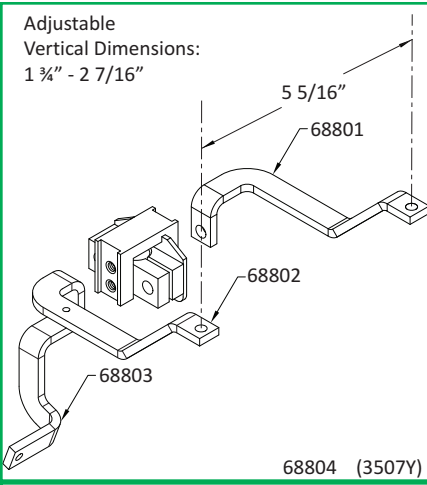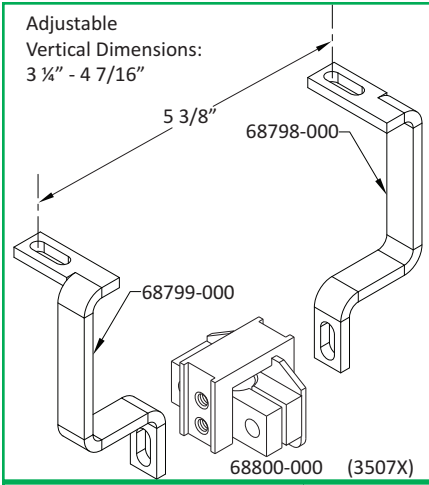


Bolt-On Mounting Bracket Diagrams


Adjustable
Vertical Dimensions:
7/16" - 5/8"

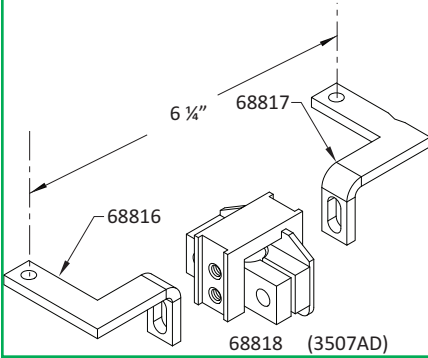


Adjustable
Vertical Dimensions:
7/16" - 5/8"

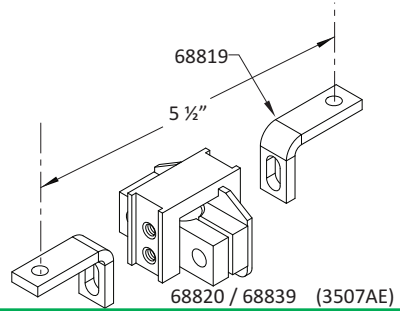


Adjustable
Vertical Dimensions:
5/16" - 7/16"

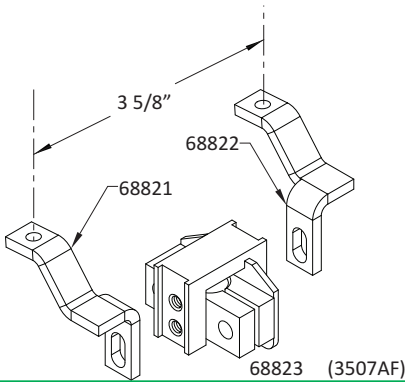


Adjustable
Vertical Dimensions:
1/16" - 1 1/16"

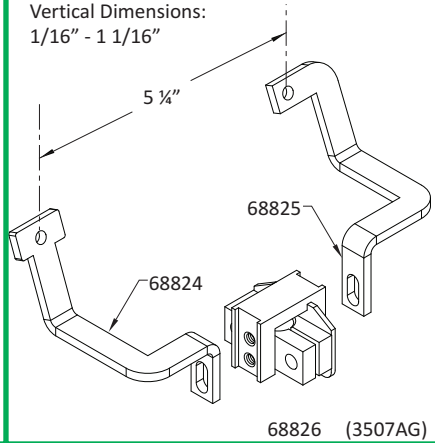

Adjustable
Vertical Dimensions:
0" - 5/8"

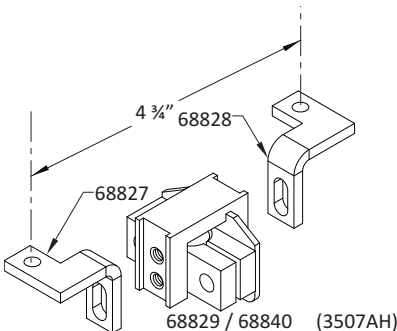


Adjustable
Vertical Dimensions:
2 5/8" - 3 1/4"

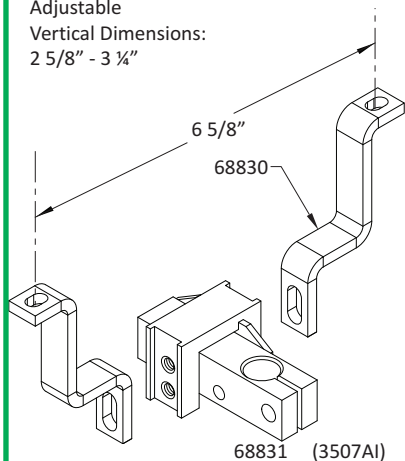


Bolt-On Mounting Bracket Diagrams


Adjustable
Vertical Dimensions:
2 1/2" - 3 1/8"

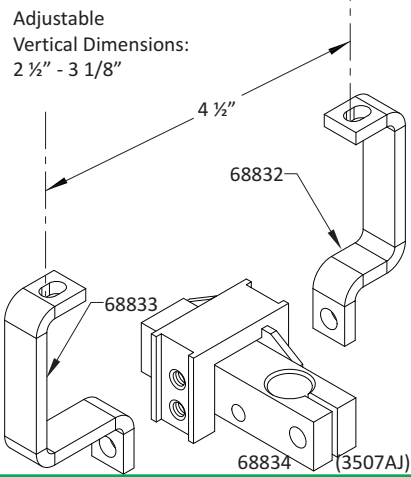

Adjustable
Vertical Dimensions:
0" - 3/8"

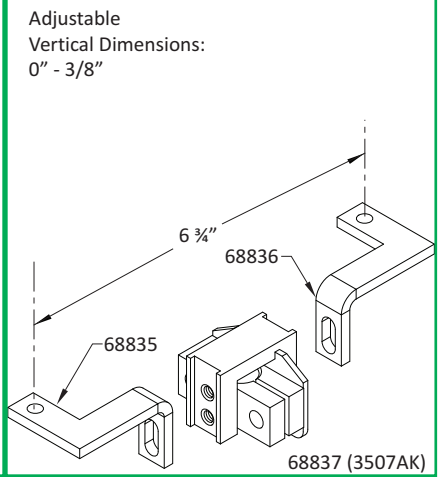

Adjustable
Vertical Dimensions:
1/4" - 3/8"

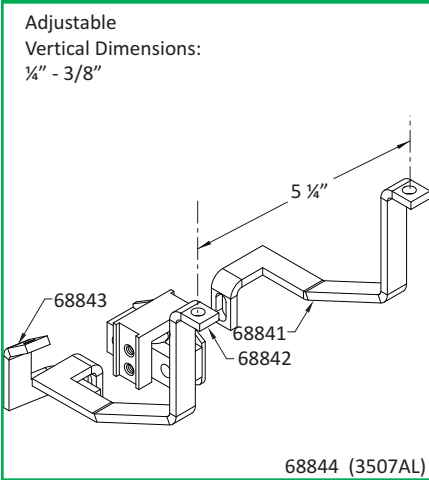

Hand Control Mounting Brackets (Column Mount)

Intentionally Left Blank

